

SERVICE MANUAL

STEREO CAR CASSETTE RECEIVER BASIC TAPE MECHANISM: CDS-363AG1-A

SPECIFICATIONS -1/1

RADIO SECTION (FM)

Frequency Range:	87.5 MHz - 108 MHz
Usable Sensitivity:	12.7 dBf
50 dB Quieting Sensitivity:	17.2 dBf
IF Rejection:	100 dB
Frequency Response:	30 Hz - 15,000 Hz
S/N Ratio:	67 dB
Stereo Separation:	35 dB at 1 kHz
Alternate Channel Selectivity:	98 dB
Capture Ratio:	3 dB

(MW)

Frequency Range:	531 kHz - 1,602 kHz
Usable Sensitivity:	30 μ V (30 dB)

(LW)

Frequency Range:	144 kHz-288 kHz (1-kHz/9-kHz steps)
Usable Sensitivity:	30 μ V (30 dB)

TAPE SECTION

Tape Speed:	4.8 cm/sec.
S/N Ratio:	50 dB
Frequency Response:	40 Hz - 14,000 Hz
Stereo Separation:	40 dB

AUDIO SECTION

Max. Power Output:	40 W x 4 channels
--------------------	-------------------

AUX input


Input sensitivity (load impedance) AUX:	300 mV (10 k Ω)
---	-------------------------

GENERAL

Power-Supply Voltage:	14.4 V (11 to 16 V allowable), DC, negative ground
Load Impedance:	4 Ω
Tone Control:	Bass \pm 10 dB at 100 Hz, Treble \pm 10 dB at 10 kHz
Installed size:	182 (W) x 53 (H) x 155 (D) mm

- Specifications and external appearance are subject to change without notice due to product improvement.

ACCESSORIES PARTS LIST -1/1

! =  SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					CT-R402
					YZSL
	O	AS1001	87-253-032-410	U+2-3 BLK	a
	O	AS1002	87-B10-141-010	NUT,5 TYPE-2	a
	O	AS1003	87-B10-144-010	W,5.2-10-0.5	a
	O	AS1004	87-B10-145-010	W-SPR,5.3-8.5-1.5	a
	O	AS1005	8C-KCG-060-110	CASE,DFP C BLK	a
	O	AS1006	8Z-KC1-231-110	HLDR,HALF -C	a
	O	AS1007	8Z-KC1-232-010	KEY,REMOVE -C	a
	O	AS1008	8Z-KC1-235-010	HLDR,REAR MTG	a
	O	AS1009	87-B10-143-010	UT1+5-15 W/O SLOT	a
	O	AS1010	8Z-KC1-244-010	S-SCREW,5*6 TH+ TAPPING ST	a
	O	AS1011	8Z-KC1-250-010	S-SCREW,HEXAGON	a
	X	AS1012	87-B50-079-010	LIST,FACILITY (B) -0007	a
	O	AS1013	8C-KCG-933-010	IB,INST YZ/YV (9L,R) SML	a
	O	AS1014	8C-KTA-915-010	IB,YZ (9L) SML R432M/R402	a

ELECTRICAL PARTS LIST - 1/6

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					CT-R402
					YZSL
AUX	O J	0601	85-HRL-623-010	JACK,3.5 BLK ST BLK	a
AUX	O W	0601	8A-KC7-611-010	F-CABLE,3P (AUX)	a
FRONT	O C	0601	87-012-272-080	C-CAP,U 680P-50 K B GRM	a
FRONT	O C	0602	87-A10-504-080	C-CAP,U 0.047-16 K B	a
FRONT	O C	0603	87-A10-504-080	C-CAP,U 0.047-16 K B	a
FRONT	O C	0604	87-A10-504-080	C-CAP,U 0.047-16 K B	a
FRONT	O C	0605	87-A10-504-080	C-CAP,U 0.047-16 K B	a
FRONT	O CN	0601	88-KTA-602-010	C-CONN,15P CAM-B67	a
FRONT	S D	0601	87-A40-817-040	C-ZENER,STZ6.8N	a
FRONT	S D	0602	87-A40-817-040	C-ZENER,STZ6.8N	a
FRONT	S IC	0601	88-KT1-608-010	C-IC,LC75854W	a
FRONT	O LCD	0601	8C-KTF-610-010	LCD,CKT-10/15	a
FRONT	O LED	0601	87-A91-355-040	C-LED,BR1112H-TR-RED	a
FRONT	O LED	0602	87-A91-355-040	C-LED,BR1112H-TR-RED	a
FRONT	O LED	0604	87-A41-159-040	C-LED,SML-012YT YEL	a
FRONT	O LED	0605	87-A41-159-040	C-LED,SML-012YT YEL	a
FRONT	O LED	0606	87-A41-159-040	C-LED,SML-012YT YEL	a
FRONT	O LED	0610	87-A41-158-010	LED,SLI-343YY3F YEL	a
FRONT	S Q	0601	89-324-122-040	C-TR,2SC2412KR	a
FRONT	S Q	0603	89-324-122-040	C-TR,2SC2412KR	a
					CT-R402
					YZSL
FRONT	O R	0601	88-108-103-080	C-RES,U 10K-1/16W J	a
FRONT	O R	0602	88-108-102-080	C-RES,U 1K-1/16W J	a
FRONT	O R	0603	88-108-102-080	C-RES,U 1K-1/16W J	a
FRONT	O R	0604	88-108-102-080	C-RES,U 1K-1/16W J	a
FRONT	O R	0605	88-108-102-080	C-RES,U 1K-1/16W J	a
FRONT	X R	0606	88-108-104-080	C-RES,U 100K-1/16W J	a
FRONT	X R	0607	88-108-104-080	C-RES,U 100K-1/16W J	a
FRONT	X R	0608	88-108-392-080	C-RES,U 3.9K-1/16W J	a
FRONT	O R	0609	88-108-101-080	C-RES,U 100-1/16W J	a
FRONT	O R	0610	88-108-101-080	C-RES,U 100-1/16W J	a
FRONT	O R	0611	88-108-101-080	C-RES,U 100-1/16W J	a
FRONT	X R	0612	88-108-683-080	C-RES,U 68K-1/16W J	a
FRONT	X R	0613	88-108-471-080	C-RES,U 470-1/16W J	a
FRONT	X R	0614	88-108-331-080	C-RES,U 330-1/16W J	a
FRONT	X R	0615	88-108-152-080	C-RES,U 1.5K-1/16W J	a
FRONT	X R	0616	88-108-682-080	C-RES,U 6.8K-1/16W J	a
FRONT	X R	0617	88-108-471-080	C-RES,U 470-1/16W J	a
FRONT	X R	0618	88-108-471-080	C-RES,U 470-1/16W J	a
FRONT	X R	0619	88-108-471-080	C-RES,U 470-1/16W J	a
FRONT	O R	0624	88-108-102-080	C-RES,U 1K-1/16W J	a
					CT-R402
					YZSL
FRONT	X R	0625	88-108-682-080	C-RES,U 6.8K-1/16W J	a
FRONT	O SW	0601	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0602	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0603	87-036-339-080	C-SW,TACT SKQM	a
FRONT	O SW	0604	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0605	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0606	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0607	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0608	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0609	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0610	87-036-339-080	C-SW,TACT SKQM	a
FRONT	O SW	0611	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0612	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0613	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0614	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0615	87-A90-164-080	SW,TACT SKQNAB(N)	a
FRONT	O SW	0616	87-A91-987-080	SW,TACT SKQCAB	a
FRONT	O SW	0621	87-A92-329-010	SW,RTRY SRP-1211VD	a
HEAD	O CNA	0201	8Z-KTG-651-010	CONN ASSY,3P HEAD	a
HEAD	O CNA	0202	8Z-KTG-652-010	CONN ASSY,8P MOTOR	a
					CT-R402
					YZSL
MAIN	O ANT	0101	8Z-KT1-614-010	ANT,AW-002	a
MAIN	O C	0101	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a
MAIN	O C	0102	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a
MAIN	O C	0103	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a
MAIN	O C	0104	87-010-379-040	CAP,E 22-16 M 11L SME	a
MAIN	O C	0105	87-010-787-080	C-CAP,U 0.022-25 K B GRM	a
MAIN	O C	0106	87-010-553-040	CAP,E 47-16 M 5L SRE	a
MAIN	O C	0108	87-010-194-080	C-CAP,S 0.047-25 Z F	a
MAIN	O C	0109	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a
MAIN	O C	0110	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a
MAIN	O C	0111	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a
MAIN	O C	0113	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a
MAIN	O C	0114	87-010-787-080	C-CAP,U 0.022-25 K B GRM	a
MAIN	O C	0115	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a
MAIN	O C	0116	87-010-495-040	CAP,E 2.2-50 M 5L SRE	a
MAIN	O C	0117	87-012-282-080	C-CAP,U 4700P-50 K B GRM	a
MAIN	O C	0118	87-010-067-040	CAP,E 0.1-50 M 5L SRE	a
MAIN	O C	0119	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a
MAIN	O C	0121	87-010-786-080	C-CAP,U 0.018-25 K B GRM	a
MAIN	O C	0122	87-010-786-080	C-CAP,U 0.018-25 K B GRM	a

ELECTRICAL PARTS LIST - 2/6

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	!	C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
						CT-R402
						YZSL
MAIN		O	C	0123	87-016-526-080 C-CAP,S 0.47-16 BK	a
MAIN		O	C	0124	87-016-526-080 C-CAP,S 0.47-16 BK	a
MAIN		O	C	0151	87-012-183-080 C-CAP,U 30P-50 J CH GRM	a
MAIN		O	C	0152	87-012-182-080 C-CAP,U 27P-50 J CH GRM	a
MAIN		O	C	0153	87-010-495-040 CAP,E 2.2-50 M 5L SRE	a
MAIN		O	C	0154	87-012-336-080 C-CAP,U 330P-50 J SL GRM	a
MAIN		O	C	0155	87-012-271-080 C-CAP,U 560P-50 K B GRM	a
MAIN		O	C	0156	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0201	87-012-274-080 C-CAP,U 1000P-50 K B GRM	a
MAIN		O	C	0202	87-012-274-080 C-CAP,U 1000P-50 K B GRM	a
MAIN		O	C	0203	87-010-498-040 CAP,E 10-16 M 5L SRE	a
MAIN		O	C	0204	87-010-498-040 CAP,E 10-16 M 5L SRE	a
MAIN		O	C	0205	87-010-263-040 CAP,E 100-10 M 11L SME	a
MAIN		O	C	0206	87-010-263-040 CAP,E 100-10 M 11L SME	a
MAIN		O	C	0207	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0208	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0209	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0210	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0211	87-010-263-040 CAP,E 100-10 M 11L SME	a
MAIN		O	C	0212	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
						CT-R402
						YZSL
MAIN		O	C	0213	87-010-380-040 CAP,E 47-16 M 11L SME	a
MAIN		O	C	0401	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0402	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0403	87-010-805-080 C-CAP,S 1-16 Z F GRM	a
MAIN		O	C	0404	87-010-805-080 C-CAP,S 1-16 Z F GRM	a
MAIN		O	C	0405	87-012-280-080 C-CAP,U 3300P-50 K B GRM	a
MAIN		O	C	0406	87-012-280-080 C-CAP,U 3300P-50 K B GRM	a
MAIN		O	C	0407	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0408	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0409	87-010-498-040 CAP,E 10-16 M 5L SRE	a
MAIN		O	C	0410	87-010-498-040 CAP,E 10-16 M 5L SRE	a
MAIN		O	C	0411	87-A10-781-080 C-CAP,U 0.15-10 K B	a
MAIN		O	C	0412	87-A10-781-080 C-CAP,U 0.15-10 K B	a
MAIN		O	C	0413	87-A10-781-080 C-CAP,U 0.15-10 K B	a
MAIN		O	C	0414	87-A10-781-080 C-CAP,U 0.15-10 K B	a
MAIN		O	C	0415	87-010-498-040 CAP,E 10-16 M 5L SRE	a
MAIN		O	C	0416	87-010-498-040 CAP,E 10-16 M 5L SRE	a
MAIN		O	C	0417	87-010-497-040 CAP,E 4.7-35 M 5L SRE	a
MAIN		O	C	0418	87-010-404-040 CAP,E 4.7-50 M 11L SME	a
MAIN		O	C	0419	87-010-404-040 CAP,E 4.7-50 M 11L SME	a
						CT-R402
						YZSL
MAIN		O	C	0420	87-010-497-040 CAP,E 4.7-35 M 5L SRE	a
MAIN		O	C	0423	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0424	87-010-555-040 CAP,E 100-10 M 5L SRE	a
MAIN		O	C	0425	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0426	87-010-379-040 CAP,E 22-16 M 11L SME	a
MAIN		O	C	0427	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0428	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0429	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0430	87-012-286-080 C-CAP,U 0.01-25 K B GRM	a
MAIN		O	C	0431	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0501	87-016-526-080 C-CAP,S 0.47-16 BK	a
MAIN		O	C	0502	87-016-526-080 C-CAP,S 0.47-16 BK	a
MAIN		O	C	0503	87-016-526-080 C-CAP,S 0.47-16 BK	a
MAIN		O	C	0504	87-016-526-080 C-CAP,S 0.47-16 BK	a
MAIN		O	C	0505	87-012-273-080 C-CAP,U 820P-50 K B GRM	a
MAIN		O	C	0506	87-012-273-080 C-CAP,U 820P-50 K B GRM	a
MAIN		O	C	0507	87-012-273-080 C-CAP,U 820P-50 K B GRM	a
MAIN		O	C	0508	87-012-273-080 C-CAP,U 820P-50 K B GRM	a
MAIN		O	C	0509	87-010-378-040 CAP,E 10-16 M 11L SME	a
MAIN		O	C	0510	87-010-379-040 CAP,E 22-16 M 11L SME	a
						CT-R402
						YZSL
MAIN		O	C	0511	87-010-544-040 CAP,E 0.1-50 M 11L SME	a
MAIN		O	C	0512	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0513	8A-KC7-623-000 CAP,E 2200-16 125 BT	a
MAIN		O	C	0514	87-012-278-080 C-CAP,U 2200P-50 K B GRM	a
MAIN		O	C	0701	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0702	87-010-494-040 CAP,E 1-50 M 5L SRE	a
MAIN		O	C	0703	87-012-274-080 C-CAP,U 1000P-50 K B GRM	a
MAIN		O	C	0704	87-012-274-080 C-CAP,U 1000P-50 K B GRM	a
MAIN		O	C	0705	87-012-286-080 C-CAP,U 0.01-25 K B GRM	a
MAIN		O	C	0706	87-012-286-080 C-CAP,U 0.01-25 K B GRM	a
MAIN		O	C	0801	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0802	87-012-278-080 C-CAP,U 2200P-50 K B GRM	a
MAIN		O	C	0803	87-010-759-080 C-CAP,U 0.1-25 Z F CM/CB	a
MAIN		O	C	0804	87-010-935-040 CAP,E 220-16 M VR	a
MAIN		O	C	0805	87-010-380-040 CAP,E 47-16 M 11L SME	a
MAIN		O	C	0806	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0901	87-010-544-040 CAP,E 0.1-50 M 11L SME	a
MAIN		O	C	0902	87-010-787-080 C-CAP,U 0.022-25 K B GRM	a
MAIN		O	C	0903	87-010-555-040 CAP,E 100-10 M 5L SRE	a
MAIN		O	C	0904	87-016-039-090 CAP,DL 0.022F-5.5 Z 70 FM	a

ELECTRICAL PARTS LIST - 3/6

! = SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					CT-R402
					YZSL
MAIN	O C	0907	87-012-172-080	C-CAP,U 10P-50 D CH GRM	a
MAIN	O C	0908	87-012-172-080	C-CAP,U 10P-50 D CH GRM	a
MAIN	O C	0909	87-010-759-080	C-CAP,U 0.1-25 Z F CM/CB	a
MAIN	O C	0910	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a
MAIN	O C	0911	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a
MAIN	O C	0914	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a
MAIN	O C	0915	87-012-195-080	C-CAP,U 100P-50 J CH GRM	a
MAIN	! O CN	0201	87-A60-620-010	CONN,3P V 2MM JMT	a
MAIN	! O CN	0202	87-099-408-010	CONN,8P V WHT EH	a
MAIN	O CN	0701	88-KTA-603-010	CONN,15P CAM-B68	a
MAIN	O CNA	0801	8A-KT1-645-110	CONN ASSY,8P ISO-BLACK-B	a
MAIN	O CNA	0802	8A-KT1-646-110	CONN ASSY,8P ISO-WHITE-B	a
MAIN	S D	0101	87-020-465-080	DIODE,1SS133	a
MAIN	S D	0102	87-020-465-080	DIODE,1SS133	a
MAIN	S D	0151	87-070-136-080	ZENER,MTZJ5.1B	a
MAIN	X D	0401	88-121-101-080	RES,100-1/8W J	a
MAIN	S D	0402	87-A40-250-040	C-DIODE,DAN217	a
MAIN	S D	0403	87-020-465-080	DIODE,1SS133	a
MAIN	S D	0501	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0502	87-001-783-080	DIODE,1N4002	a
					CT-R402
					YZSL
MAIN	S D	0503	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0504	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0505	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0506	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0507	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0508	87-001-783-080	DIODE,1N4002	a
MAIN	S D	0509	87-A40-509-080	ZENER,MTZJ6.8C	a
MAIN	S D	0510	87-020-331-040	C-DIODE,DAN202K	a
MAIN	S D	0705	87-020-331-040	C-DIODE,DAN202K	a
MAIN	S D	0801	87-A40-798-010	DIODE,1N5402 (3A/200V)	a
MAIN	S D	0802	87-A40-509-080	ZENER,MTZJ6.8C	a
MAIN	S D	0803	87-070-334-080	ZENER,MTZJ10B	a
MAIN	S D	0804	87-070-136-080	ZENER,MTZJ5.1B	a
MAIN	S D	0806	87-A40-620-080	ZENER,MTZJ6.2A	a
MAIN	S D	0807	87-A40-509-080	ZENER,MTZJ6.8C	a
MAIN	S D	0808	87-020-465-080	DIODE,1SS133	a
MAIN	S D	0902	87-070-136-080	ZENER,MTZJ5.1B	a
MAIN	S D	0906	87-020-465-080	DIODE,1SS133	a
MAIN	S F	0801	8B-KC1-621-010	FUSE,15A 32V	a
MAIN	S IC	0151	88-KT1-607-080	C-IC,SAA6579T	a
					CT-R402
					YZSL
MAIN	S IC	0201	87-027-539-010	IC,LA3161	a
MAIN	S IC	0401	8Z-KT1-622-010	C-IC,LC75374E	a
MAIN	S IC	0501	87-A22-246-010	IC,TA8252H	a
MAIN	S IC	0901	8C-KTA-611-030	C-IC,UPD178078GF-565-3BA	a
MAIN	O JW	0165	87-A11-144-080	CAP,TC U 0.1-50 K B	a
MAIN	X JW	0231	88-121-102-080	RES,1K-1/8W J	a
MAIN	O L	0101	87-003-143-080	COIL,4.7UH K LAL02	a
MAIN	O L	0102	8Z-KT1-619-010	COIL,68MH K7-D	a
MAIN	O L	0701	87-003-143-080	COIL,4.7UH K LAL02	a
MAIN	O L	0801	8B-KCF-615-010	FLTR,AMORPHOUS -CHOKE	a
MAIN	O L	0901	87-003-149-080	COIL,47UH J LAL02	a
MAIN	S Q	0101	87-A30-427-040	C-TR,DTC114EKA	a
MAIN	S Q	0102	87-A30-289-040	C-TR,2SA1037AK(Q)	a
MAIN	S Q	0103	89-324-122-040	C-TR,2SC2412KR	a
MAIN	S Q	0105	89-324-122-040	C-TR,2SC2412KR	a
MAIN	S Q	0106	89-324-122-040	C-TR,2SC2412KR	a
MAIN	S Q	0107	89-324-122-040	C-TR,2SC2412KR	a
MAIN	S Q	0108	89-324-122-040	C-TR,2SC2412KR	a
MAIN	S Q	0201	87-A30-689-080	TR,DTB123YS	a
MAIN	S Q	0202	87-A30-427-040	C-TR,DTC114EKA	a
					CT-R402
					YZSL
MAIN	S Q	0403	89-324-122-040	C-TR,2SC2412KR	a
MAIN	S Q	0404	87-A30-287-040	C-TR,DTC114TKA	a
MAIN	S Q	0405	87-A30-287-040	C-TR,DTC114TKA	a
MAIN	S Q	0406	87-A30-287-040	C-TR,DTC114TKA	a
MAIN	S Q	0407	87-A30-287-040	C-TR,DTC114TKA	a
MAIN	S Q	0408	87-A30-282-040	C-TR,DTA114TKA	a
MAIN	S Q	0410	87-A30-287-040	C-TR,DTC114TKA	a
MAIN	S Q	0501	87-A30-282-040	C-TR,DTA114TKA	a
MAIN	S Q	0801	89-213-750-010	TR,2SB1375	a
MAIN	S Q	0802	87-A30-427-040	C-TR,DTC114EKA	a
MAIN	S Q	0803	89-420-120-010	TR,2SD2012	a
MAIN	O Q	0804	89-418-580-080	TR,2SD1858TV2	a
MAIN	S Q	0807	87-A30-427-040	C-TR,DTC114EKA	a
MAIN	S Q	0808	87-A30-455-040	C-TR,DTA144EKA	a
MAIN	X R	0101	88-121-105-080	RES,1M-1/8W J	a
MAIN	X R	0102	88-121-102-080	RES,1K-1/8W J	a
MAIN	X R	0103	88-121-181-080	RES,180-1/8W J	a
MAIN	X R	0104	88-121-100-080	RES,10-1/8W J	a
MAIN	O R	0105	88-108-473-080	C-RES,U 47K-1/16W J	a
MAIN	X R	0106	88-108-333-080	C-RES,U 33K-1/16W J	a

ELECTRICAL PARTS LIST - 4/6

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					CT-R402
					YZSL
MAIN		O R	0107 88-108-473-080	C-RES,U 47K-1/16W J	a
MAIN		O R	0108 88-108-103-080	C-RES,U 10K-1/16W J	a
MAIN		X R	0109 88-108-222-080	C-RES,U 2.2K-1/16W J	a
MAIN		X R	0110 88-118-330-080	C-RES,S 33-1/10W J	a
MAIN		X R	0111 88-118-100-080	C-RES,S 10-1/10W J	a
MAIN		X R	0112 88-108-821-080	C-RES,U 820-1/16W J	a
MAIN		X R	0113 88-108-000-080	C-JUMPER,U	a
MAIN		O R	0114 88-108-103-080	C-RES,U 10K-1/16W J	a
MAIN		O R	0115 88-108-103-080	C-RES,U 10K-1/16W J	a
MAIN		X R	0116 88-121-102-080	RES,1K-1/8W J	a
MAIN		O R	0118 88-108-102-080	C-RES,U 1K-1/16W J	a
MAIN		X R	0119 88-108-472-080	C-RES,U 4.7K-1/16W J	a
MAIN		X R	0121 88-121-682-080	RES,6.8K-1/8W J	a
MAIN		X R	0122 88-121-682-080	RES,6.8K-1/8W J	a
MAIN		O R	0123 88-108-473-080	C-RES,U 47K-1/16W J	a
MAIN		X R	0124 88-108-104-080	C-RES,U 100K-1/16W J	a
MAIN		X R	0151 88-108-222-080	C-RES,U 2.2K-1/16W J	a
MAIN		X R	0152 88-121-331-080	RES,330-1/8W J	a
MAIN		O R	0201 88-108-224-080	C-RES,U 220K-1/16W J	a
MAIN		O R	0202 88-108-224-080	C-RES,U 220K-1/16W J	a
					CT-R402
					YZSL
MAIN		X R	0203 88-108-390-080	C-RES,U 39-1/16W J	a
MAIN		X R	0204 88-108-390-080	C-RES,U 39-1/16W J	a
MAIN		O R	0205 88-108-562-080	C-RES,U 5.6K-1/16W J	a
MAIN		O R	0206 88-108-562-080	C-RES,U 5.6K-1/16W J	a
MAIN		X R	0207 88-108-154-080	C-RES,U 150K-1/16W J	a
MAIN		X R	0208 88-108-154-080	C-RES,U 150K-1/16W J	a
MAIN		O R	0209 88-108-102-080	C-RES,U 1K-1/16W J	a
MAIN		O R	0210 88-108-102-080	C-RES,U 1K-1/16W J	a
MAIN		X R	0211 88-121-470-080	RES,47-1/8W J	a
MAIN		X R	0212 88-121-472-080	RES,4.7K-1/8W J	a
MAIN		X R	0213 88-121-472-080	RES,4.7K-1/8W J	a
MAIN		X R	0214 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0215 88-121-473-080	RES,47K-1/8W J	a
MAIN		X R	0216 88-121-473-080	RES,47K-1/8W J	a
MAIN		X R	0217 88-108-104-080	C-RES,U 100K-1/16W J	a
MAIN		O R	0401 88-108-332-080	C-RES,U 3.3K-1/16W J	a
MAIN		O R	0402 88-108-332-080	C-RES,U 3.3K-1/16W J	a
MAIN		O R	0403 88-108-332-080	C-RES,U 3.3K-1/16W J	a
MAIN		O R	0404 88-108-332-080	C-RES,U 3.3K-1/16W J	a
MAIN		O R	0405 88-108-102-080	C-RES,U 1K-1/16W J	a
					CT-R402
					YZSL
MAIN		X R	0406 88-121-102-080	RES,1K-1/8W J	a
MAIN		O R	0407 88-108-102-080	C-RES,U 1K-1/16W J	a
MAIN		X R	0408 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0415 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0416 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0417 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0418 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0419 88-108-104-080	C-RES,U 100K-1/16W J	a
MAIN		X R	0420 88-108-104-080	C-RES,U 100K-1/16W J	a
MAIN		X R	0421 88-121-472-080	RES,4.7K-1/8W J	a
MAIN		X R	0422 88-108-105-080	C-RES,U 1M-1/16W J	a
MAIN		O R	0423 88-108-102-080	C-RES,U 1K-1/16W J	a
MAIN		X R	0424 88-121-103-080	RES,10K-1/8W J	a
MAIN		X R	0425 88-108-105-080	C-RES,U 1M-1/16W J	a
MAIN		X R	0426 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0427 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0428 88-121-102-080	RES,1K-1/8W J	a
MAIN		X R	0429 88-121-222-080	RES,2.2K-1/8W J	a
MAIN		X R	0430 88-121-103-080	RES,10K-1/8W J	a
MAIN		X R	0432 88-108-000-080	C-JUMPER,U	a
					CT-R402
					YZSL
MAIN		X R	0501 88-121-123-080	RES,12K-1/8W J	a
MAIN		X R	0502 88-121-123-080	RES,12K-1/8W J	a
MAIN		X R	0503 88-121-123-080	RES,12K-1/8W J	a
MAIN		X R	0504 88-121-123-080	RES,12K-1/8W J	a
MAIN		X R	0505 88-108-183-080	C-RES,U 18K-1/16W J	a
MAIN		X R	0506 88-108-183-080	C-RES,U 18K-1/16W J	a
MAIN		X R	0507 88-108-183-080	C-RES,U 18K-1/16W J	a
MAIN		X R	0508 88-108-183-080	C-RES,U 18K-1/16W J	a
MAIN		X R	0509 88-121-222-080	RES,2.2K-1/8W J	a
MAIN		X R	0510 88-121-102-080	RES,1K-1/8W J	a
MAIN		O R	0511 88-108-223-080	C-RES,U 22K-1/16W J	a
MAIN		X R	0521 88-121-102-080	RES,1K-1/8W J	a
MAIN		O R	0522 88-108-272-080	C-RES,U 2.7K-1/16W J	a
MAIN		X R	0523 88-121-104-080	RES,100K-1/8W J	a
MAIN		X R	0524 88-121-104-080	RES,100K-1/8W J	a
MAIN		X R	0525 88-121-104-080	RES,100K-1/8W J	a
MAIN		X R	0526 88-121-104-080	RES,100K-1/8W J	a
MAIN		X R	0701 88-121-472-080	RES,4.7K-1/8W J	a
MAIN		X R	0702 88-121-472-080	RES,4.7K-1/8W J	a
MAIN		O R	0703 88-108-562-080	C-RES,U 5.6K-1/16W J	a

ELECTRICAL PARTS LIST - 5/6

! = ⚠ SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.


UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					CT-R402
					YZSL
MAIN		O R	0704	88-108-562-080 C-RES,U 5.6K-1/16W J	a
MAIN		X R	0705	88-121-102-080 RES,1K-1/8W J	a
MAIN		X R	0706	88-121-102-080 RES,1K-1/8W J	a
MAIN		X R	0707	88-121-102-080 RES,1K-1/8W J	a
MAIN		X R	0708	88-121-102-080 RES,1K-1/8W J	a
MAIN		X R	0709	88-121-102-080 RES,1K-1/8W J	a
MAIN		O R	0710	88-108-103-080 C-RES,U 10K-1/16W J	a
MAIN		O R	0711	88-108-103-080 C-RES,U 10K-1/16W J	a
MAIN		X R	0712	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		O R	0801	88-108-223-080 C-RES,U 22K-1/16W J	a
MAIN		X R	0802	88-140-229-080 RES,2.2-1/2W J	a
MAIN		X R	0803	88-121-103-080 RES,10K-1/8W J	a
MAIN		X R	0804	88-140-681-080 RES,680-1/2W J	a
MAIN		X R	0805	88-140-229-080 RES,2.2-1/2W J	a
MAIN		X R	0806	88-121-471-080 RES,470-1/8W J	a
MAIN		X R	0807	88-121-104-080 RES,100K-1/8W J	a
MAIN		X R	0808	88-121-680-080 RES,68-1/8W J	a
MAIN		X R	0809	88-121-272-080 RES,2.7K-1/8W J	a
MAIN		X R	0902	88-121-104-080 RES,100K-1/8W J	a
MAIN		X R	0903	88-121-473-080 RES,47K-1/8W J	a
					CT-R402
					YZSL
MAIN		X R	0904	88-108-000-080 C-JUMPER,U	a
MAIN		X R	0905	88-121-102-080 RES,1K-1/8W J	a
MAIN		X R	0906	88-121-102-080 RES,1K-1/8W J	a
MAIN		X R	0908	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0909	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0910	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0912	88-121-473-080 RES,47K-1/8W J	a
MAIN		X R	0913	88-121-473-080 RES,47K-1/8W J	a
MAIN		X R	0914	88-121-473-080 RES,47K-1/8W J	a
MAIN		X R	0915	88-121-222-080 RES,2.2K-1/8W J	a
MAIN		X R	0916	88-121-104-080 RES,100K-1/8W J	a
MAIN		X R	0917	88-121-104-080 RES,100K-1/8W J	a
MAIN		O R	0920	88-108-473-080 C-RES,U 47K-1/16W J	a
MAIN		X R	0921	88-121-222-080 RES,2.2K-1/8W J	a
MAIN		X R	0922	88-121-222-080 RES,2.2K-1/8W J	a
MAIN		X R	0923	88-121-222-080 RES,2.2K-1/8W J	a
MAIN		X R	0924	88-121-222-080 RES,2.2K-1/8W J	a
MAIN		X R	0925	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0926	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0927	88-108-104-080 C-RES,U 100K-1/16W J	a
					CT-R402
					YZSL
MAIN		X R	0928	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0929	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		X R	0930	88-108-104-080 C-RES,U 100K-1/16W J	a
MAIN		O R	0933	88-108-223-080 C-RES,U 22K-1/16W J	a
MAIN		O R	0936	88-108-473-080 C-RES,U 47K-1/16W J	a
MAIN		O SFR	0101	87-024-438-080 SFR,220K H RH063MC	a
MAIN		O SW	0901	87-A91-070-010 SW,TACT SKHHLV	a
MAIN		O TU	0101	8C-KTA-621-010 TU UNIT, FAE347-E30	a
MAIN		X W	0101	8Z-KC1-614-010 WIRE,ANT	a
MAIN		X W	0801	8A-KCG-615-010 WIRE,400 P-MUTE	a
MAIN		O X	0151	87-A70-091-010 VIB,XTAL 4.332MHZ CSA-309	a
MAIN		O X	0901	87-A70-372-080 VIB,XTAL 6.3MHZ HC-49/U-S	a

- Regarding connectors, they are not stocked as they are not the initial order items.
The connectors are available after they are supplied from connector manufacturers upon the order is received.


○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち


Chip Resistor Part Coding

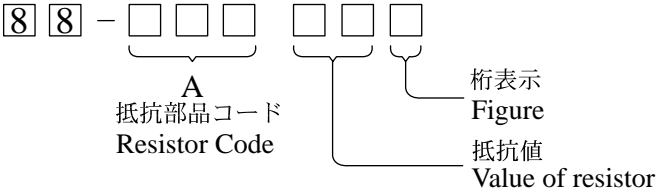

チップ抵抗
Chip resistor


容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)				抵抗コード : A Resistor Code : A
				外形／Form	L	W	t	
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION -1/1

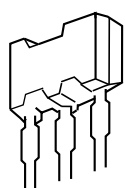

E C B

 2SD1858TV2




B C E

2SB1375
2SD2012



E C B


DTB123YS

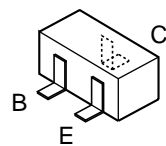



B C
E


2SA1037AK(Q)
2SC2412KR
DTA114TKA
DTA144EKA
DTC114EKA
DTC114TKA

 SCHEMATIC DIAGRAM - 1/2 (MAIN/HEAD SECTION)

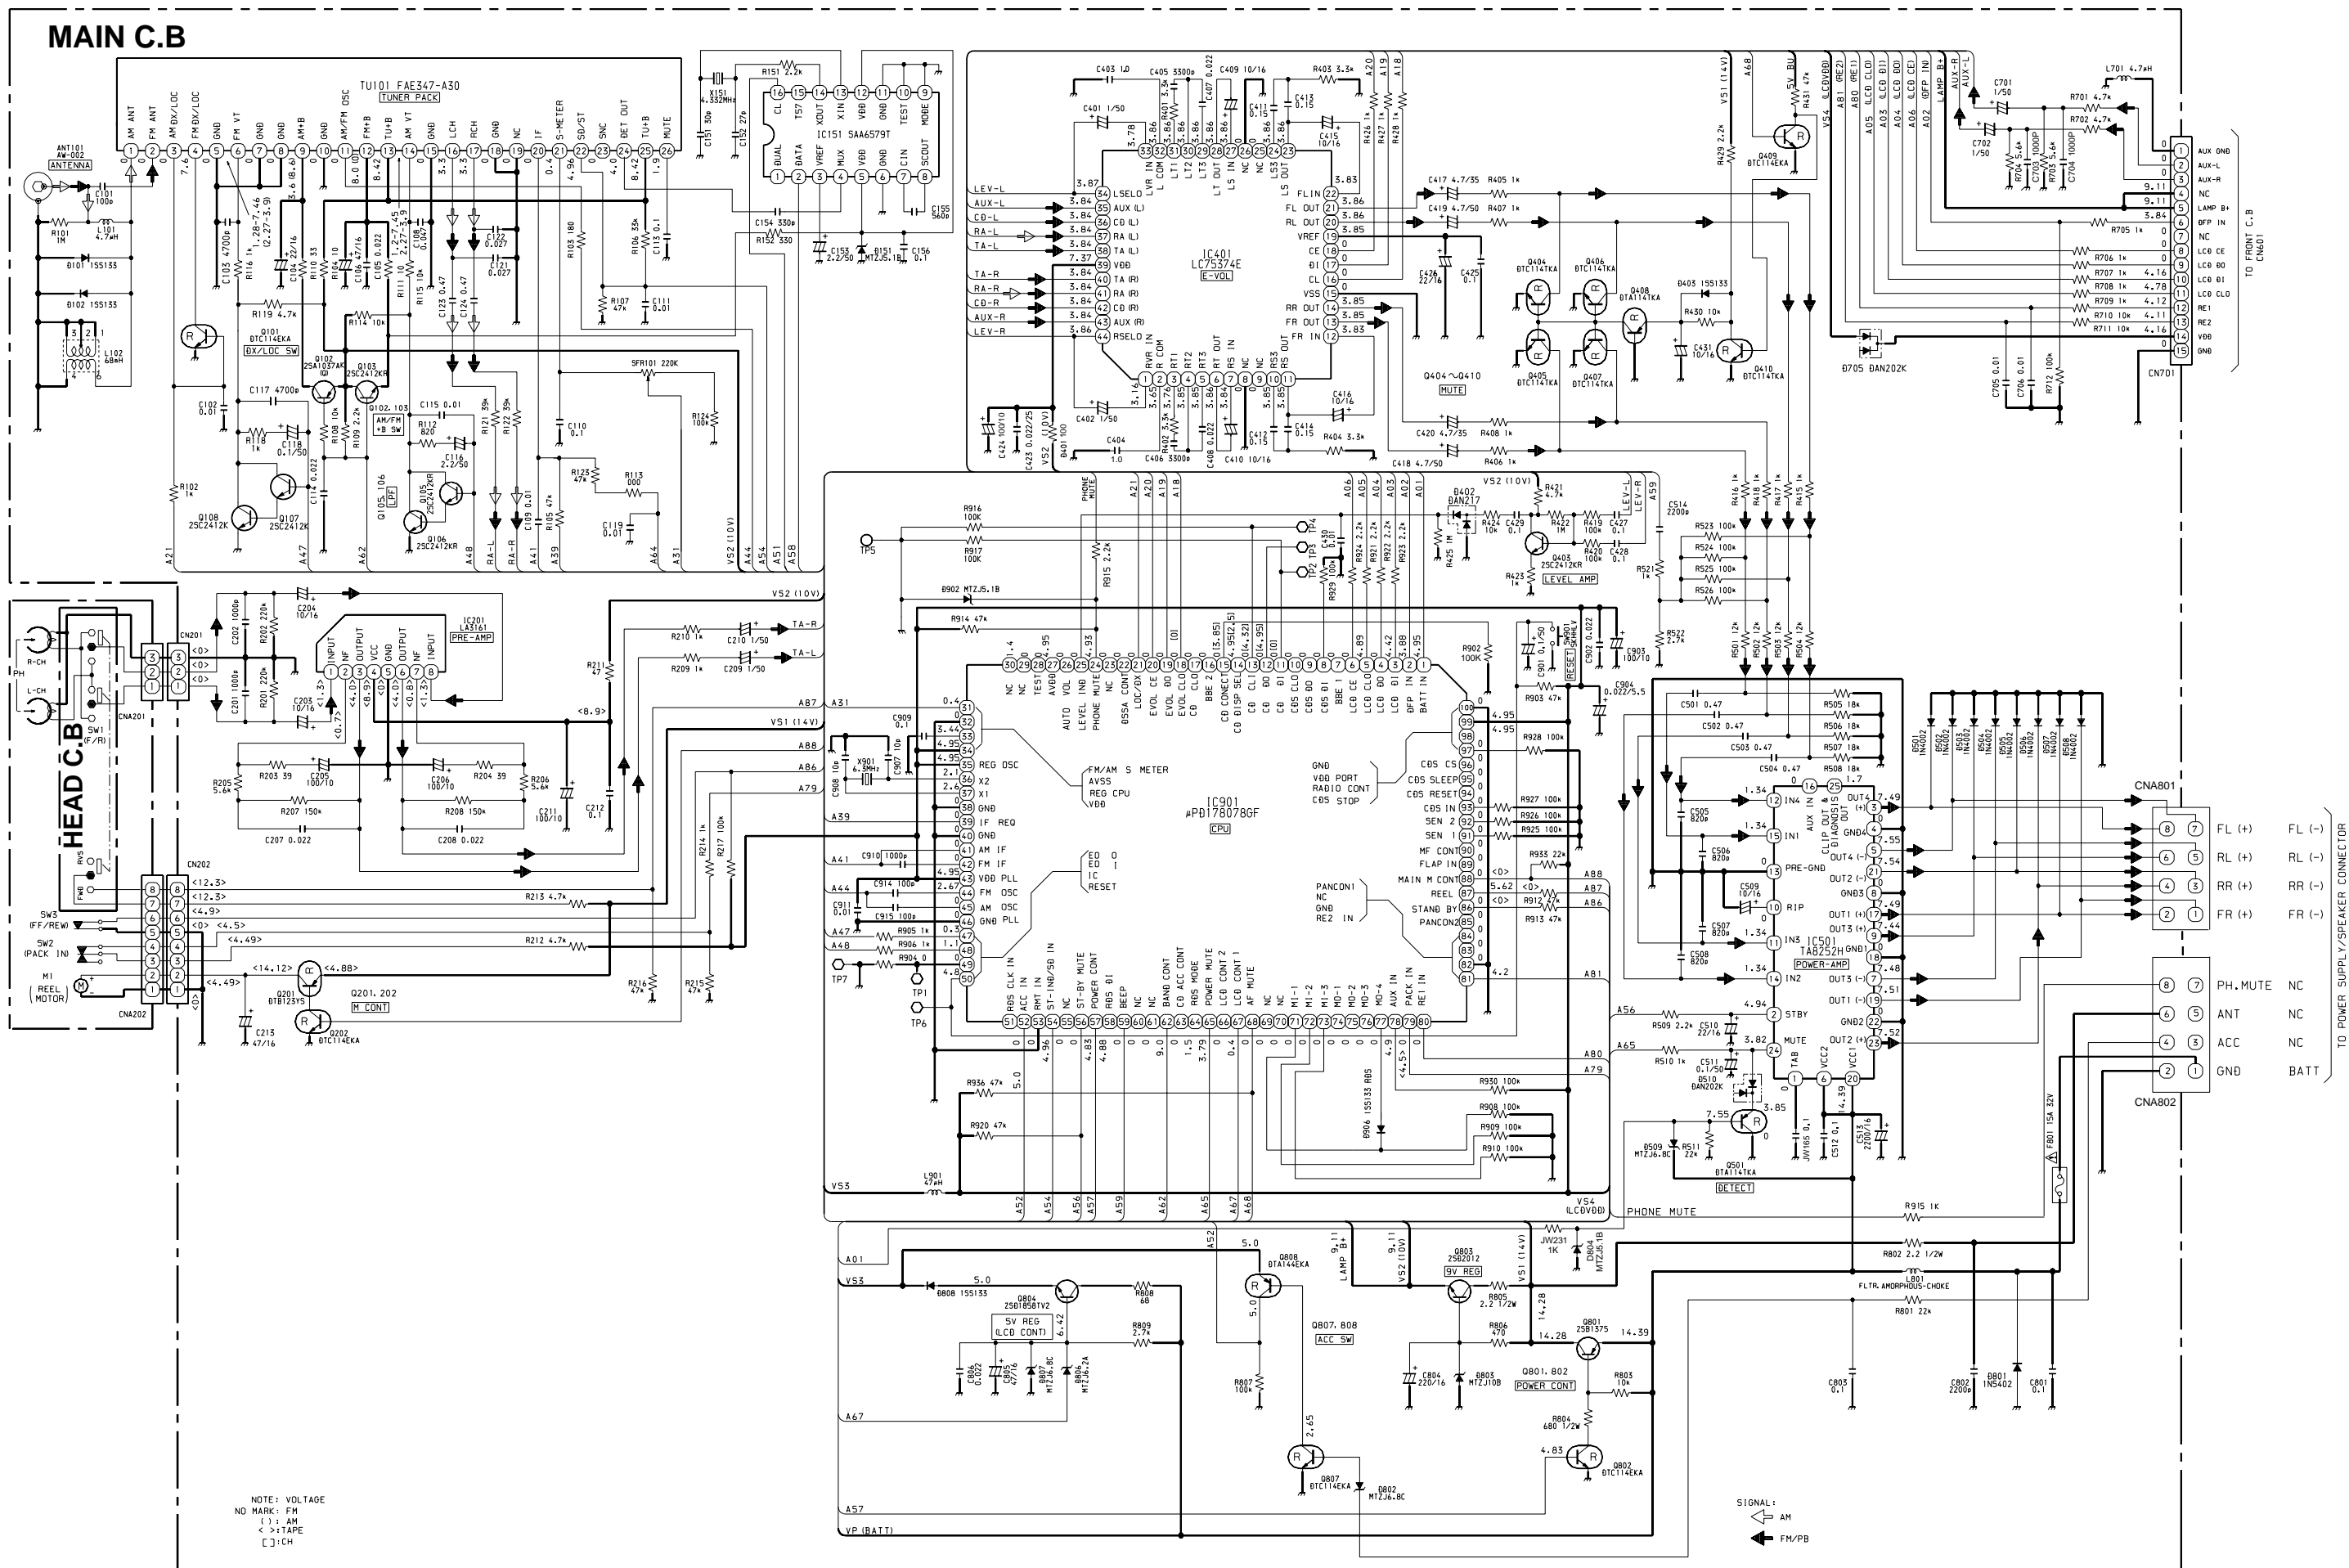




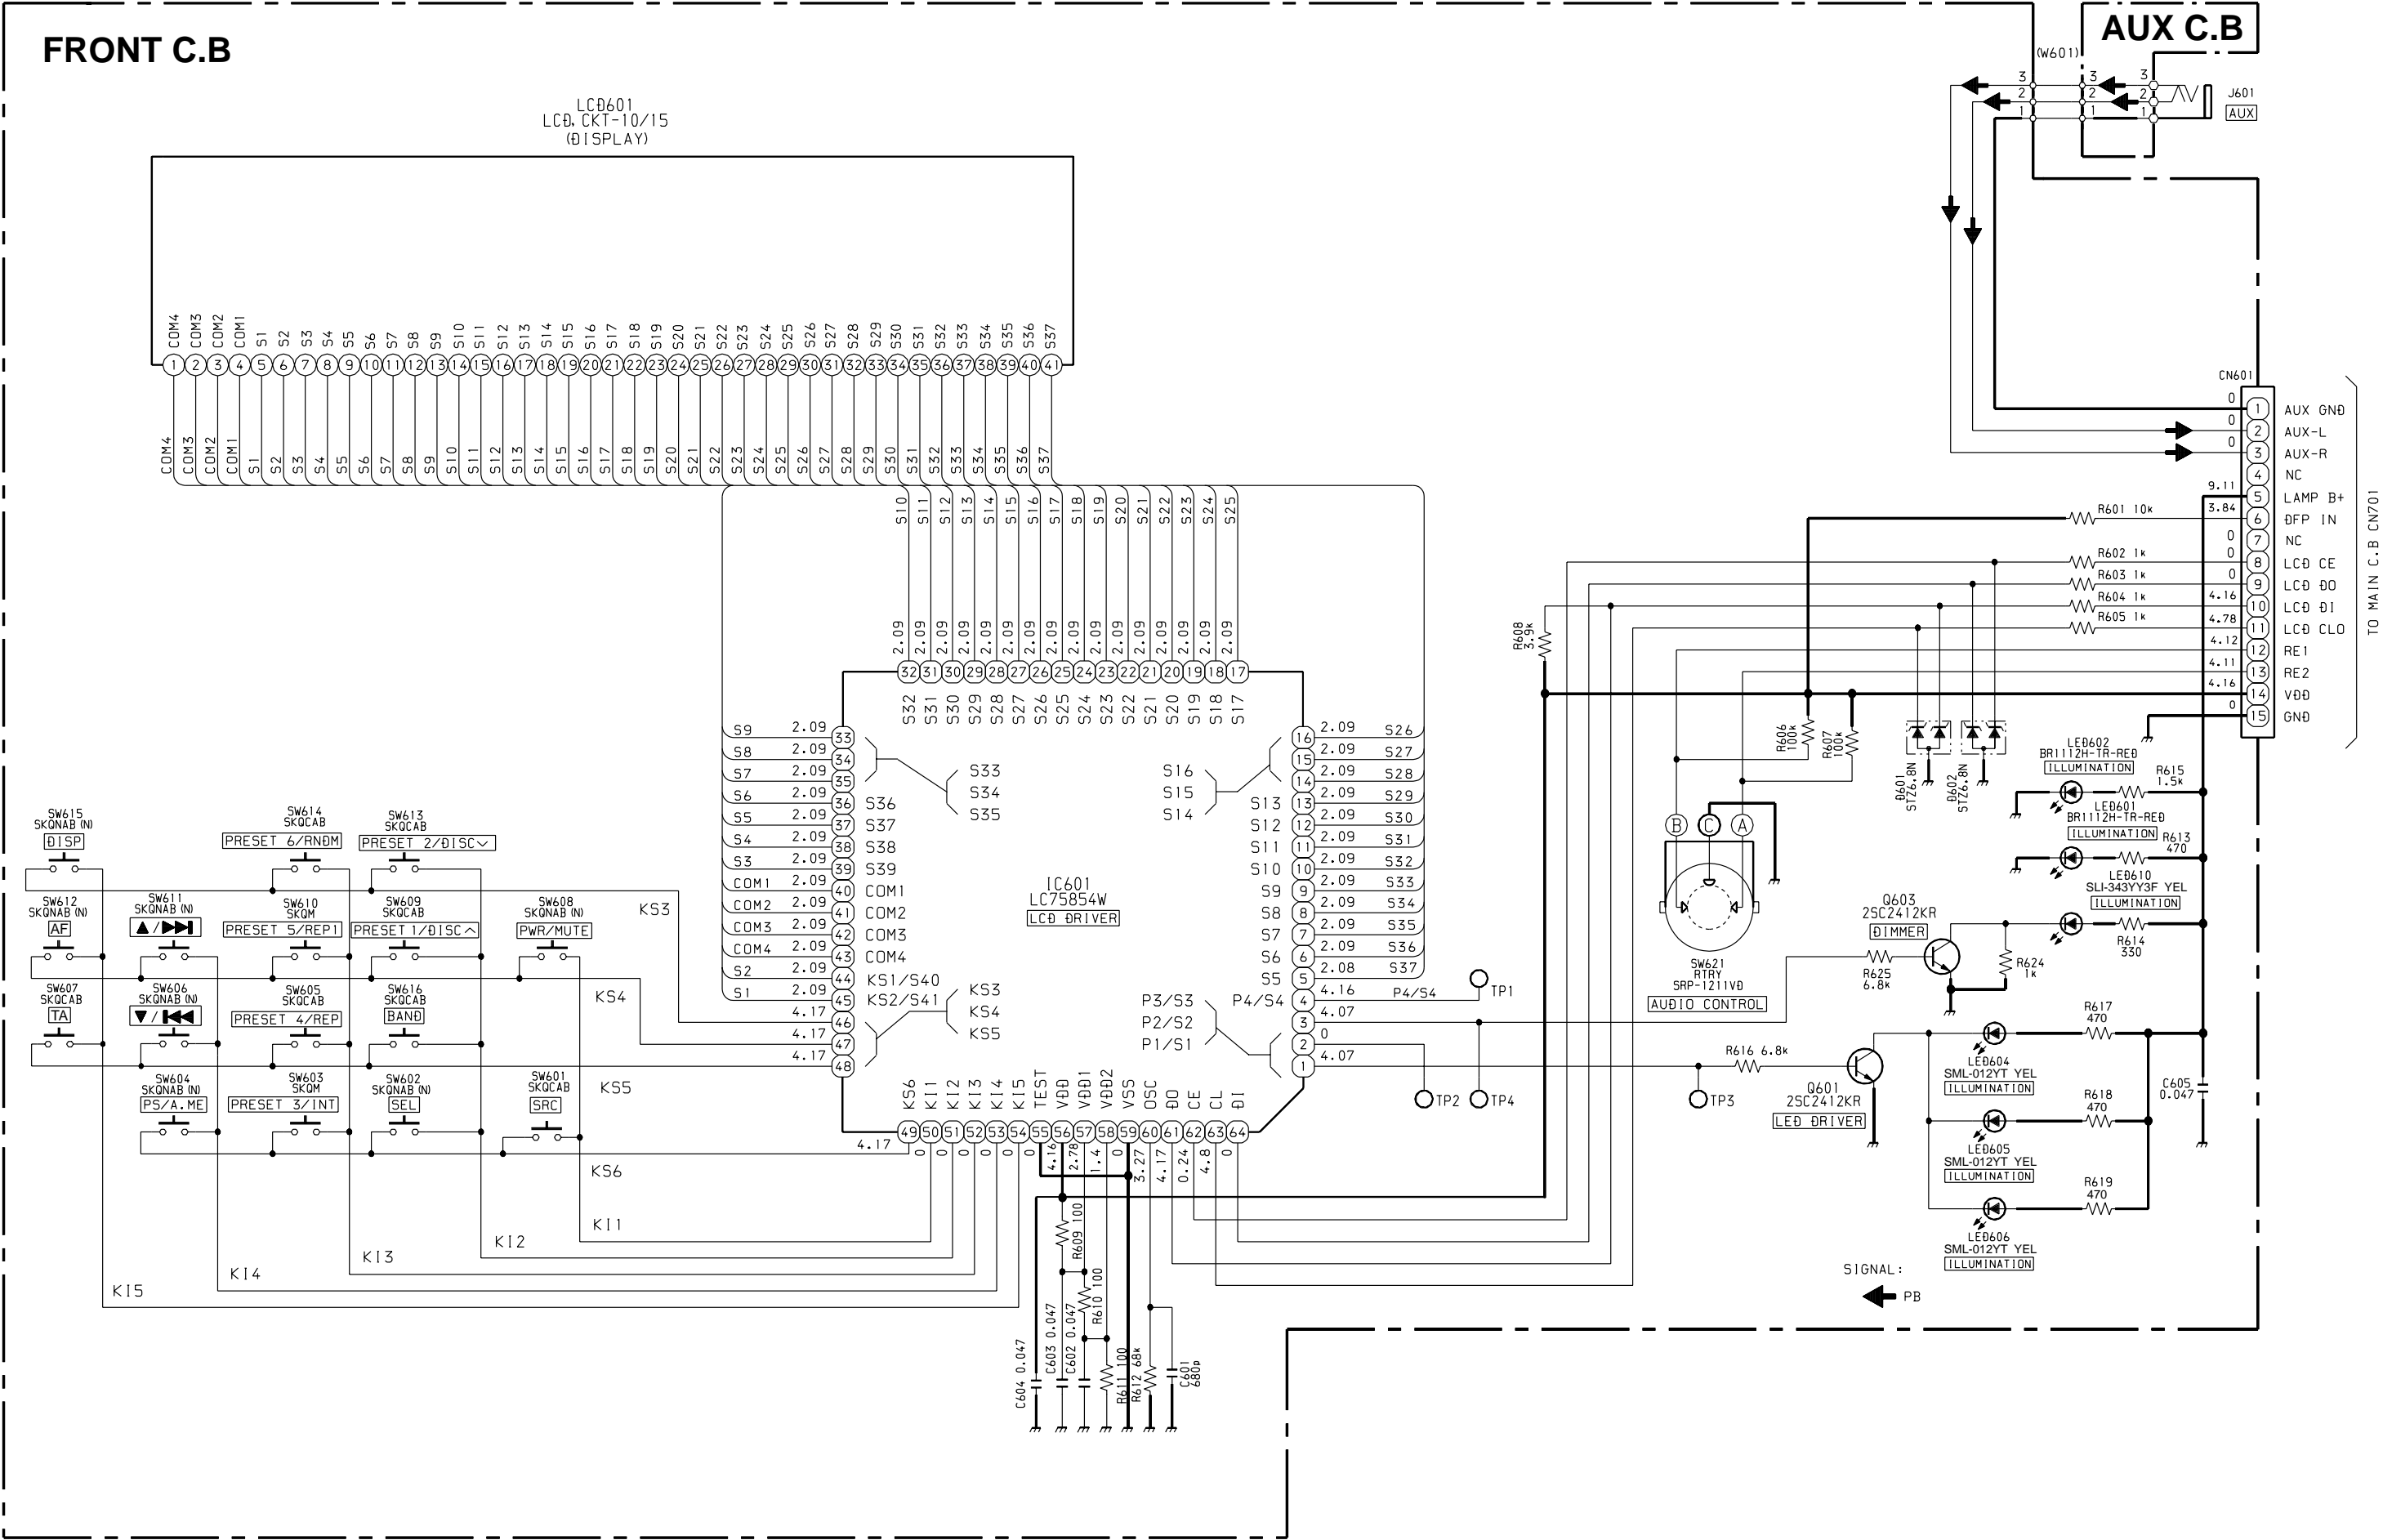


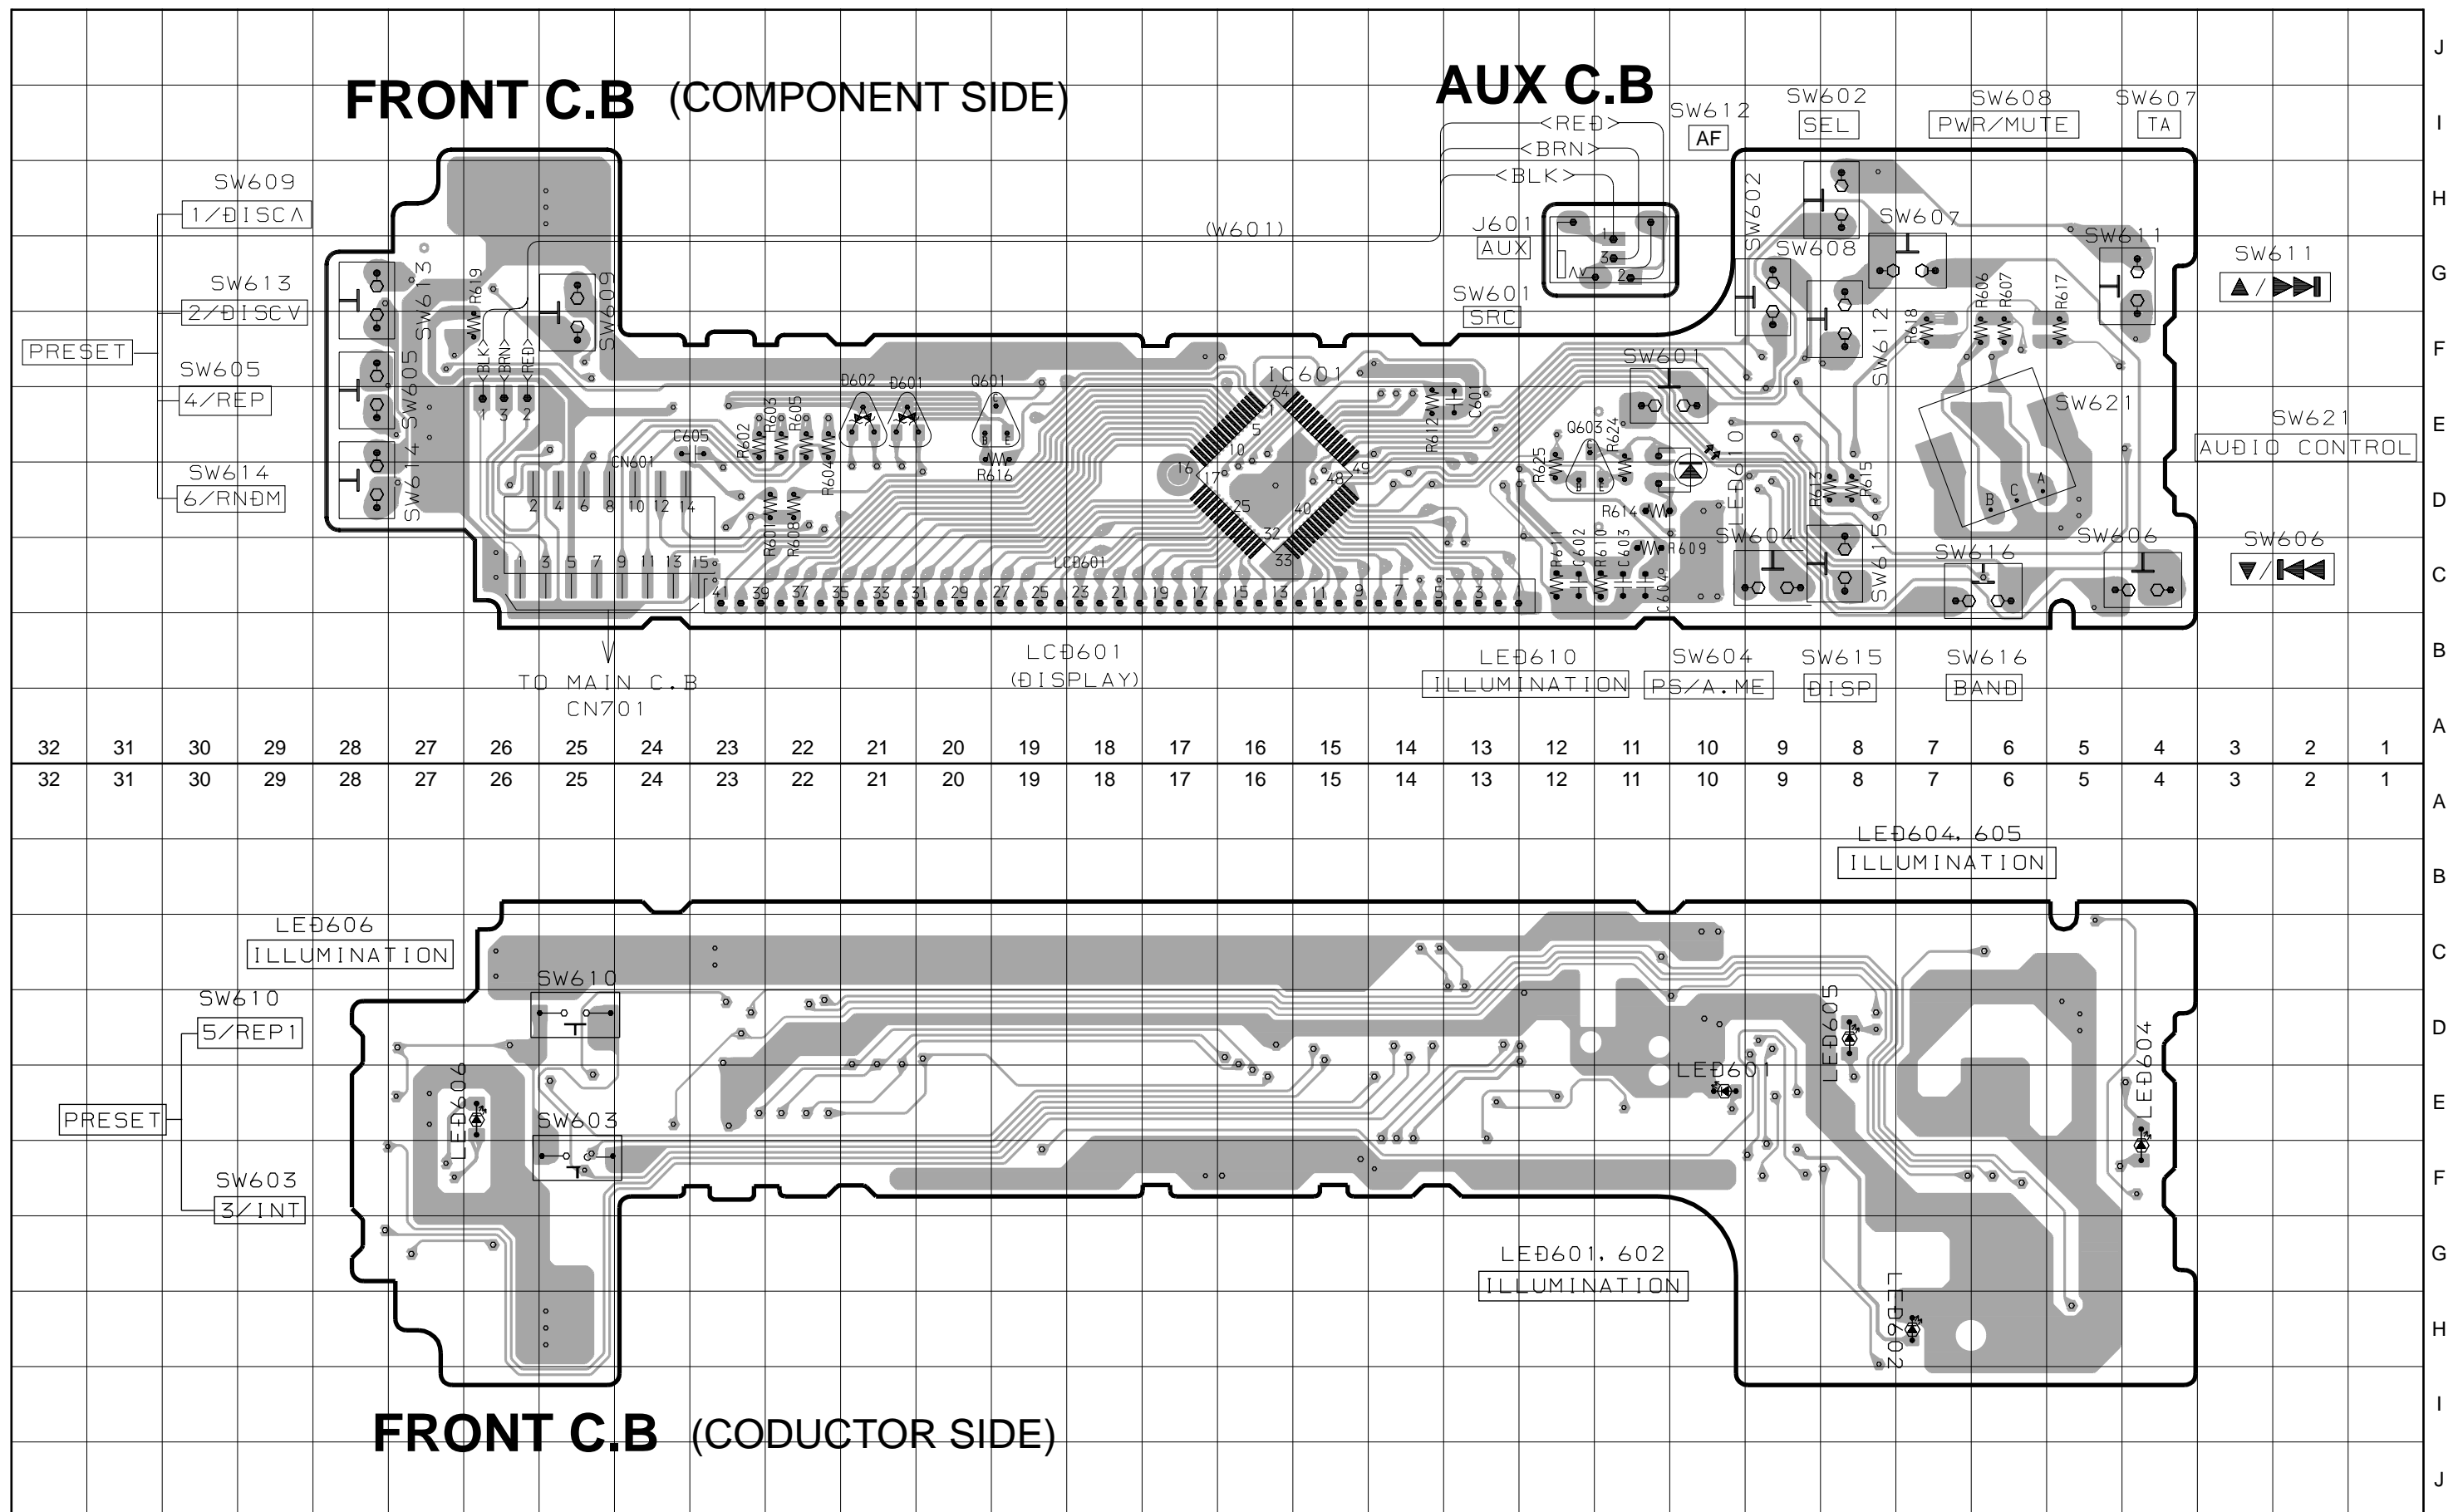


CHARACTER NAME

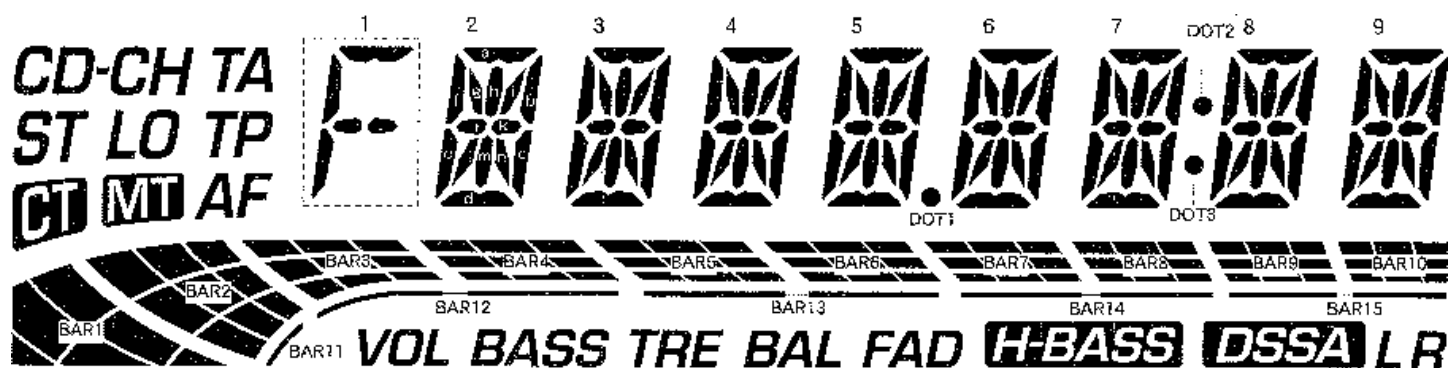

SEGMENT WIRING

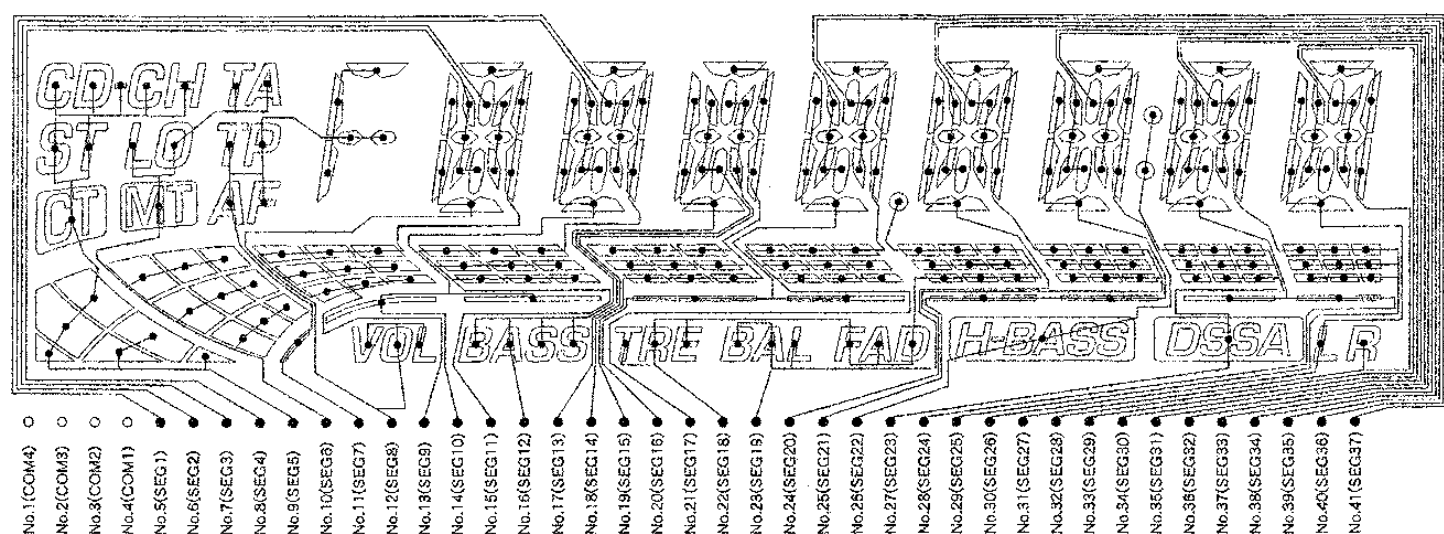

COMMON WIRING

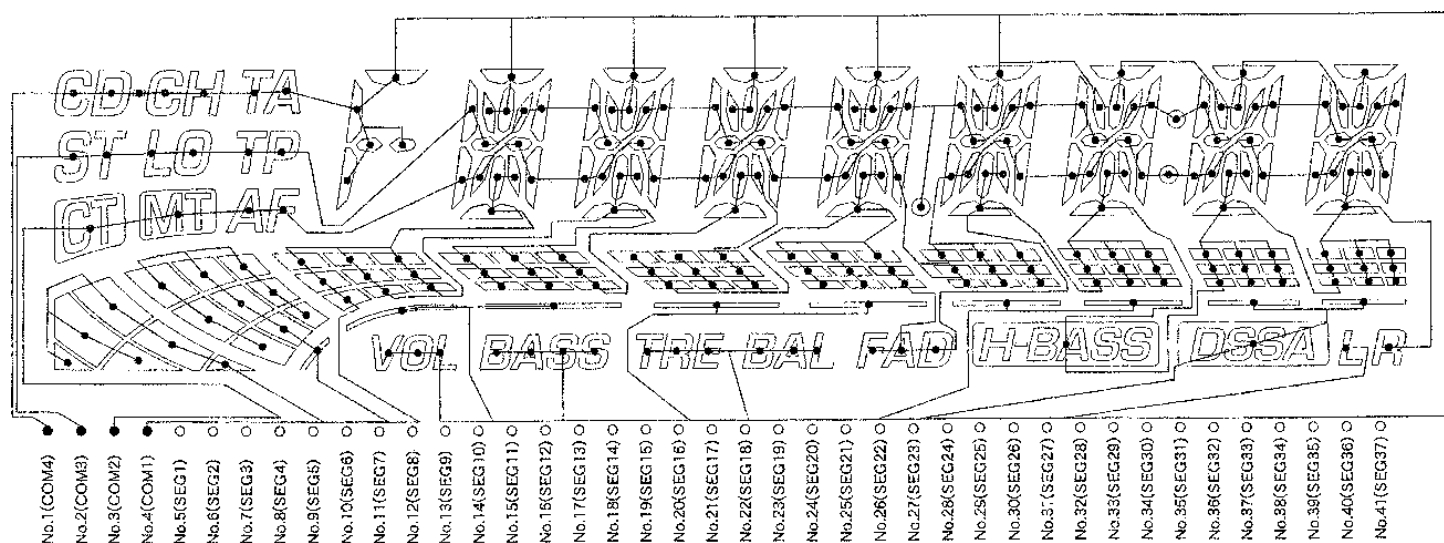


LCD DISPLAY -2/2 <CKT-10/15>

WIRING TABLE


No	1	2	3	4	5	6	7	8	9	10	11	12	13	14
COM1	--	--	--	COM1	3n	3m	2n	2m	BAR1	BAR2	BAR11	2d	BAR3	3d
COM2	--	--	COM2	--	3k	3l	2k	2l	CT	MT	AF	2e	2c	3e
COM3	--	COM3	--	--	3i	3j	2i	2j	ST	LO	TP	2f	2b	3f
COM4	COM4	--	--	--	3h	3g	2h	2g	CD-CH	TA	1	VOL	2a	BAR12
No	15	16	17	18	19	20	21	22	23	24	25	26	27	28
COM1	BAR4	4d	4m	4n	BAR5	5d	BAR6	FAD	6d	BAR8	7d	H-BASS	BAR9	8d
COM2	3c	4e	4l	4k	4c	5e	5c	BAR7	6e	6c	7e	7c	DOT3	8e
COM3	3b	4f	4j	4i	4b	5f	5b	DOT1	6f	6b	7f	7b	DOT2	8f
COM4	3a	BASS	4g	4h	4a	BAR13	5a	TRE	BAL	6a	BAR14	7a	DSSA	BAR15
No	29	30	31	32	33	34	35	36	37	38	39	40	41	
COM1	BAR10	9d	R	9n	9m	8n	8m	7n	7m	6n	6m	5n	5m	
COM2	8c	9e	9c	9k	9l	8k	8l	7k	7l	6k	6l	5k	5l	
COM3	8b	9f	9b	9i	9j	8i	8j	7i	7j	6i	6j	5i	5j	
COM4	8a	L	9a	9h	9g	8h	8g	7h	7g	6h	6g	5h	5g	

IC BLOCK DIAGRAM -1/5


IC, LC75854W

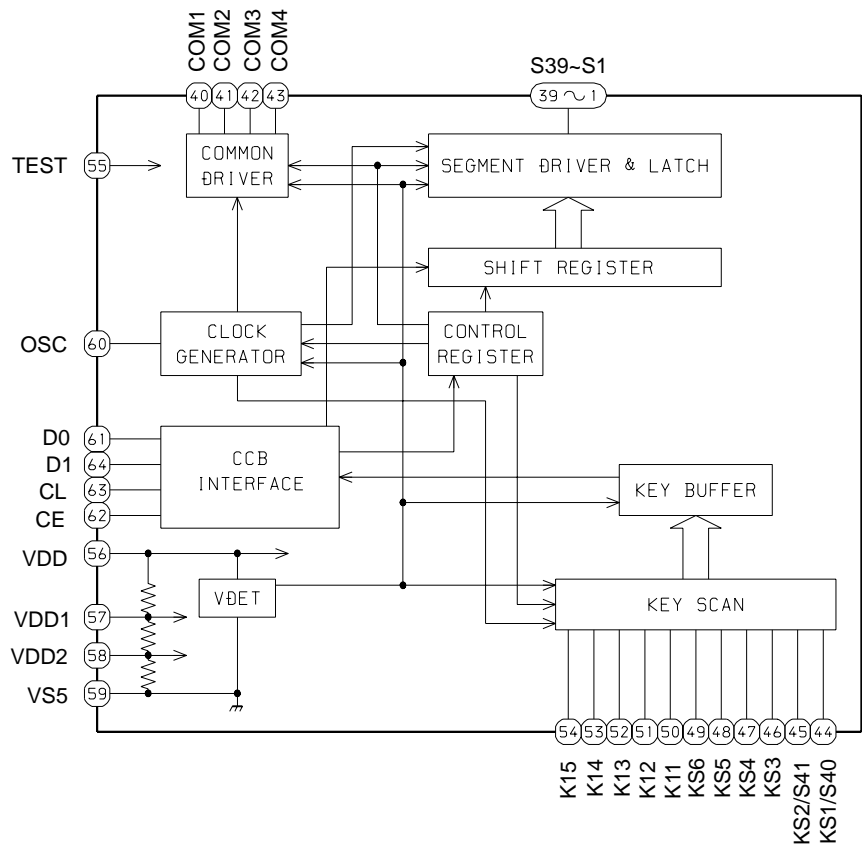




IC, TA8252H

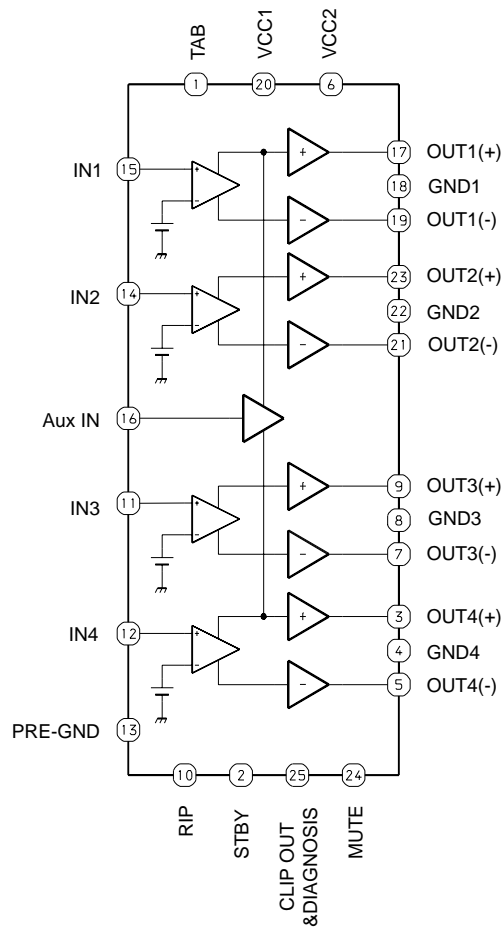

IC, LA3161

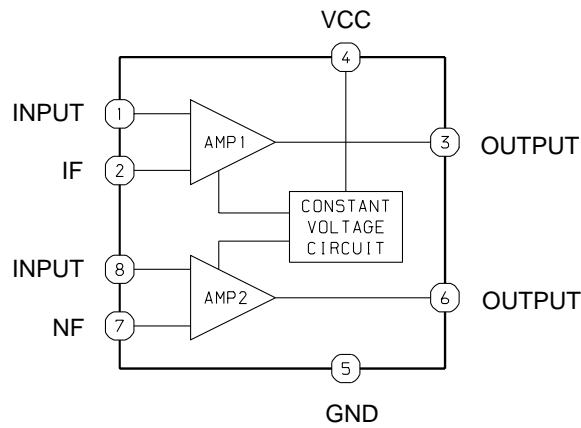

IC, SAA6579T

 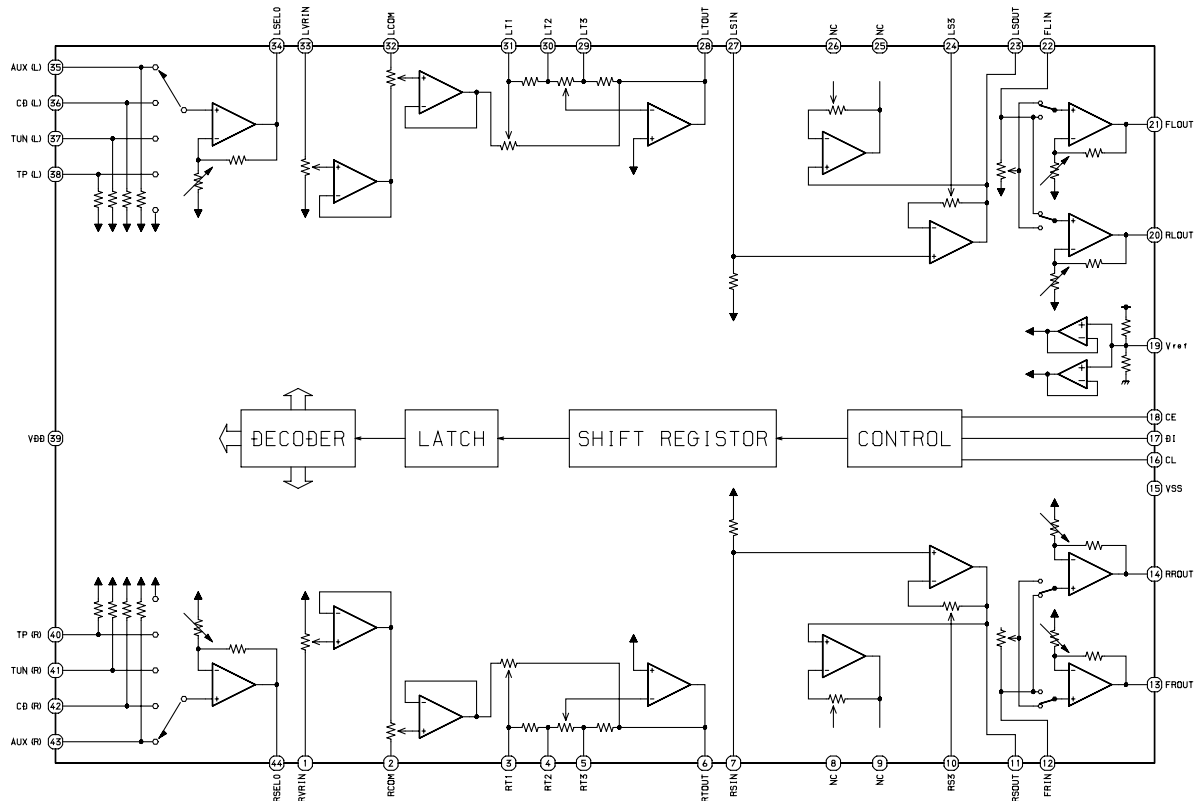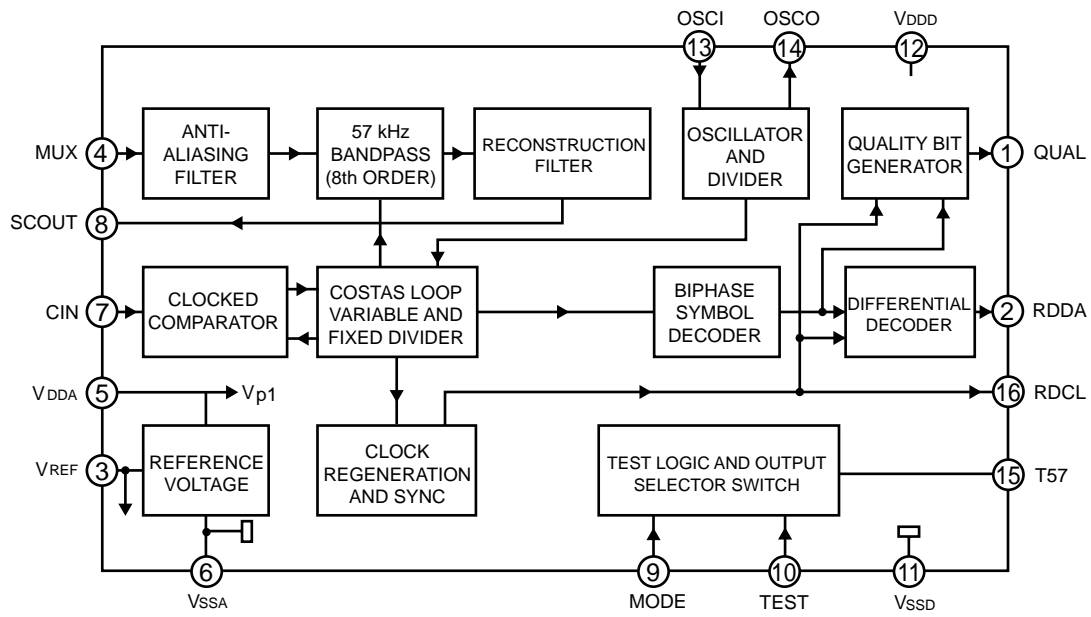

IC DESCRIPTION -1/2 (μPD178078GF-565-3BA) -1/3

Pin No.	Pin Name	I/O	Description
1	BATT IN	I	BATT ON/OFF input.
2	DFP IN	I	Detects whether DFP (front panel) is provided or not.
3	LCD DI	I	LCD driver data input.
4	LCD DO	O	LCD driver data output. Open when not used.
5	LCD CLO	O	LCD driver clock output.
6	LCD CE	O	LCD driver chip enable output.
7	BBE 1	O	BBE select output. Open when not used. (Not used)
8	CDS DI	–	Connected to pull-down resistor.
9	CDS DO	–	Not used.
10	CDS CLO	–	Not used.
11	CD DI	I	Data input from CD changer. Pulled down when not used.
12	CD DO	O	Data output to CD changer. Open when not used.
13	CD CLI	I	Clock input from CD changer. Open when not used.
14	CD DISP SEL	O	Determines the timing with which data is transferred to the head unit. Open when not used.
15	CD CONNECT	I	CD changer connection check. Pulled down when not used.
16	BBE 2	O	BBE select output. Open when not used. (Not used)
17	CD CLO	O	Clock output to CD changer. Open when not used.
18	EVOL CLO	O	Clock output to electronic VR.
19	EVOL DO	O	Data output to electronic VR.
20	EVOL CE	O	Chip enable output to electronic VR.
21	LOC/DX	O	LOC/DX switching output during radio seek. (LOC: "H", DX: "L"). Open when not used.
22	DSSA CONT	O	Outputs "H" only when DSSA L/R are operating.
23	NC	–	Not connected.
24	PHONE MUTE	I	Muting control input -20dB. Mute: "L". Connected to pull-up resistor.
25	LEVEL IND	I	Level meter signal input.
26	AUTO VOL	I	Detects microphone input for auto volume operation. Pulled down when not used. (Not used)
27	AVDD	–	Power supply.
28	TEST	–	Only used in CD model. (Not used)
29, 30	NC	–	Not connected.
31	FM/AM S METER	I	AF signal input during RDS AF operation and FM S meter signal input.
32	AVSS	–	Ground.
33	REG CPU	–	CPU power regulator.
34	VDD	–	Power supply for port.
35	REG OSC	–	Regulator for oscillator circuit. (Connected to VDD)
36	X2	O	System clock oscillator. (6.3MHz)
37	X1	I	System clock oscillator. (6.3MHz)
38	GND	–	Ground for port.
39	IF REQ	O	Output to request IF count signal.
40	GND	–	Ground.
41	AM IF	I	AM IF count signal input.
42	FM IF	I	FM IF count signal input.
43	VDD PLL	–	Power supply for PLL.

IC DESCRIPTION -1/2 (μPD178078GF-565-3BA) -2/3

Pin No.	Pin Name	I/O	Description
44	FM OSC	I	FM local oscillation input.
45	AM OSC	I	AM local oscillation input.
46	GND PLL	–	Ground for PLL.
47	EO O	O	Error output from charge pump (for FM).
48	EO I	O	Error output from charge pump (for AM).
49	IC	–	Connected to pull-down resistor.
50	RESET	I	System reset input.
51	RDS CLK IN	I	RDS clock input. Pulled down when not used. (Not used)
52	ACC IN	I	ACC (accessory power supply) ON/OFF input.
53	RMT IN	I	Remote control input. Pulled up when not used. (Connected to GND)
54	ST-IND/SD IN	I	Stop pulse input during FM/AM seek.
55	NC	–	Not connected.
56	ST-BY MUTE	O	Standby/muting output to power amplifier.
57	POWER CONT	O	Unit power control output.
58	RDS DI	I	RDS data input. Pulled down when not used. (Not used)
59	BEEP	O	BEEP output. (3kHz, 50ms)
60, 61	NC	–	Not connected.
62	BAND CONT	O	AM/FM power switching output. AM: "H", FM: "L".
63	CD ACC CONT	O	Transmits the power ON/OFF status of head unit to changer. Open when not used.
64	RDS MODE	O	Outputs "H" during RDS AF operation. Open when not used. (Not used)
65	POWER MUTE	O	Muting output to power amplifier.
66	LCD CONT 2	O	LCD DRV power control 2. (Not used)
67	LCD CONT 1	O	LCD DRV power control 1.
68	AF MUTE	O	Audio muting output.
69, 70	NC	–	Not connected.
71 ~ 73	MI-1 ~ MI-3	I	Diode matrix input for initial setting.
74	MO-1	O	Diode matrix output for initial setting. (Not used)
75	MO-2	O	Diode matrix output for initial setting. (Open demo)
76	MO-3	O	Diode matrix output for initial setting.
77	MO-4	O	Diode matrix output for initial setting. (Not used)
78	AUX IN	–	Connected to pull-up resistor.
79	PACK IN	I	Tape insertion status detection input.
80	RE1 IN	I	Rotary encoder input 1.
81	RE2 IN	I	Rotary encoder input 2.
82	GND	–	Ground.
83	NC	–	Not connected.
84	PANCON1	–	Not used.
85	PANCON2	–	Not used.
86	STAND BY	I	Mechanism stand-by input.
87	REEL	I	Reel pulse input for tape mechanism.
88	MAIN M CONT	O	Main motor control output.
89	FLAP IN	–	Not used.

IC DESCRIPTION -1/2 (IC, μ PD178078GF-565-3BA) -3/3


Pin No.	Pin Name	I/O	Description
90	MF CONT	–	Not used.
91	SEN1	–	Connected to pull-down resistor.
92	SEN2	–	Connected to pull-down resistor.
93	CDS IN	–	Connected to pull-down resistor.
94	CDS RESET	–	Not used.
95	CDS SLEEP	–	Not used.
96	CDS CS	–	Not used.
97	CDS STOP	–	Connected to pull-down resistor.
98	RADIO CONT	O	Radio ON/OFF. Power switching output. Radio ON: "H". (Not used)
99	VDD PORT	–	Power supply for port.
100	GND	–	GND.

IC DESCRIPTION -2/2 (LC75374E) -1/2

Pin No.	Pin Name	I/O	Description
1	RVR IN	I	4dB volume control input. Must be driven at a low impedance.
2	R COM	–	1dB volume common pin. (Connected to GND through a capacitor)
3 ~ 5	RT1 ~ RT3	–	For the connection of capacitors that compensate for bass and treble in the tone control circuit. A high-frequency compensation capacitor must be connected between RT1 and RT2. A low-frequency compensation capacitor must be connected between RT2 and RT3.
6	RT OUT	O	Tone control output.
7	RS IN	I	Super bass input. Must be driven at a low impedance.
8	NC	–	Connected to GND.
9	NC	–	Not connected.
10	RS3	O	For the connection of RCH super bass compensation capacitors.
11	RS OUT		
12	FR IN	I	Fader input. Must be driven at a low impedance.
13	FR OUT	O	Fader output. The front and rear sides can be attenuated independently.
14	RR OUT		
15	VSS	–	GND.
16	CL	I	Serial data and clock input for control.
17	DI		
18	CE	–	Chip enable. Data is written in the internal latch when the chip enable signal goes "L" from "H", and each analog switch is activated. Data transfer is enable at "H".
19	VREF	–	Generates a 1/2 VDD power source. A capacitor must be connected between VREF and GND as a troubleshooting against power ripples.
20	RL OUT	O	Fader output. The front and rear sides can be attenuated independently.
21	FL OUT		
22	FL IN	I	Fader input. Must be driven at a low impedance.
23	LS OUT	O	For the connection of LCH super bass compensation capacitors.
24	LS3		
25	NC	–	Not connected.
26	NC	–	Connected to GND.
27	LS IN	I	Super bass input. Must be driven at a low impedance.
28	LT OUT	O	Tone control output.
29 ~ 31	LT3 ~ LT1	–	For the connection of capacitors that compensate for bass and treble in the tone control circuit. A high-frequency compensation capacitor must be connected between LT1 and LT2. A low-frequency compensation capacitor must be connected between LT2 and LT3.
32	L COM	–	1dB volume common pin. (Connected to GND through a capacitor)
33	LVR IN	I	4dB volume control input. Must be driven at a low impedance.
34	LSELO	O	Input selector output pin.
35	AUX (L)	I	Signal input pins.
36	CD (L)		
37	RA (L)		
38	TA (L)		
39	VDD	–	Power supply.

IC DESCRIPTION -2/2 (LC75374E) -2/2

Pin No.	Pin Name	I/O	Description
40	TA (R)	I	Signal input pins.
41	RA (R)		
42	CD (R)		
43	AUX (R)		
44	RSELO	O	Input selector output pin.

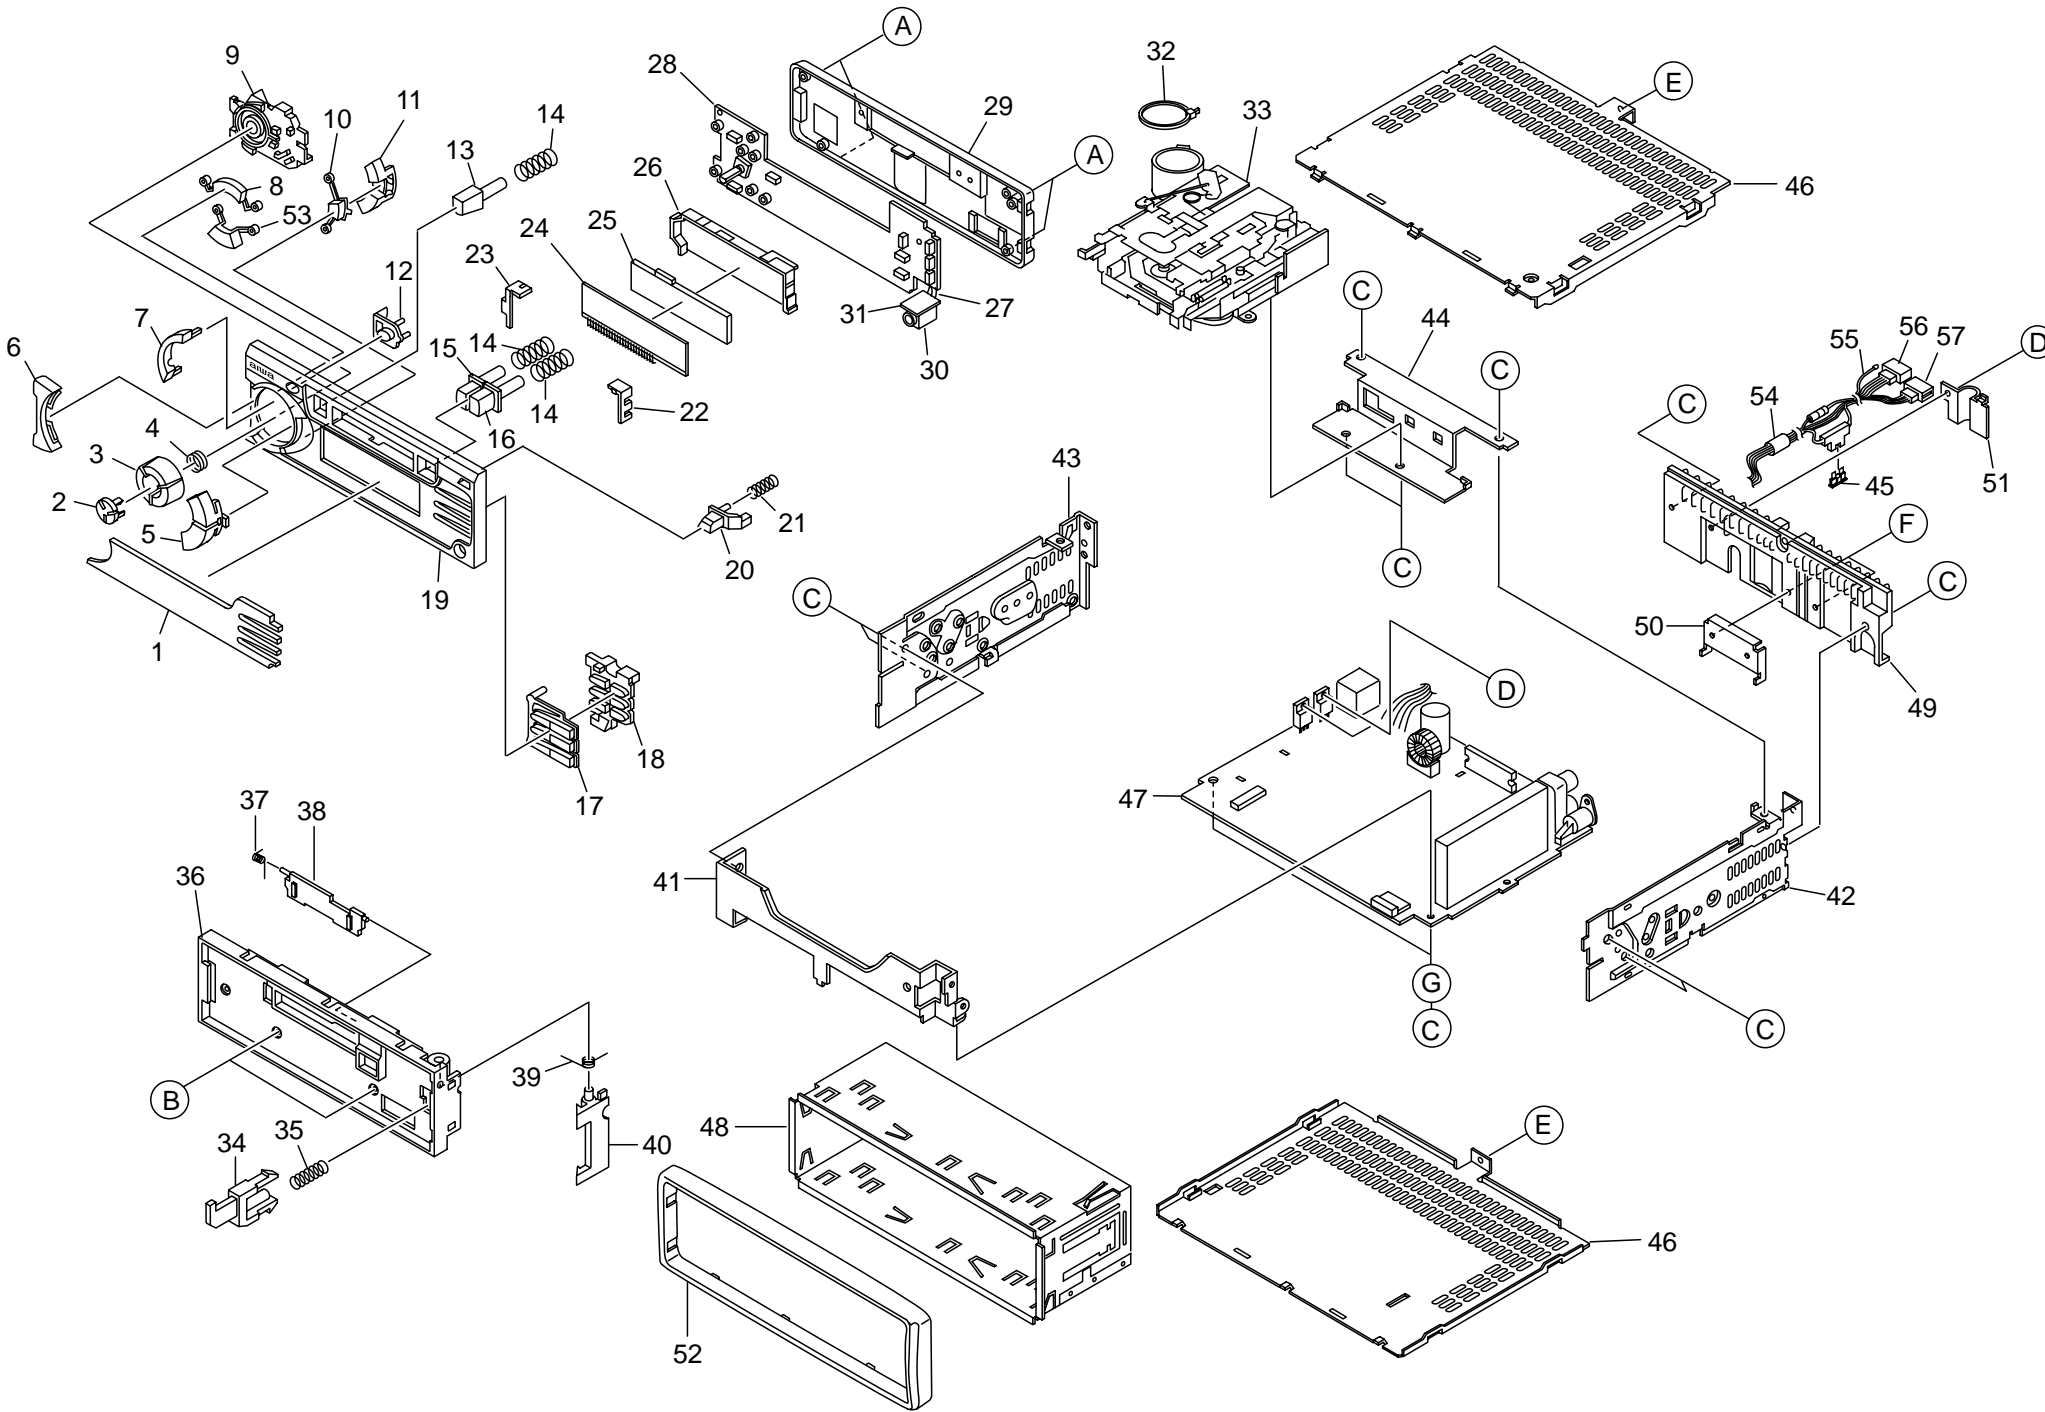

MECHANICAL PARTS LIST -1/1


! = SAFETY PARTS
 C = Components marked
 All components used on this model at the production line are shown in this service manual.
 However, please note that not all components will be available as spare parts for after-sales service.
 Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
 Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					CT-R402 YZSL
	O	MC1001	8C-KTA-002-010	WINDOW,R402	a
	O	MC1002	8C-KTA-012-010	LENS,RTRY CLEAR	a
	O	MC1003	8C-KCG-021-010	KNOB,RTRY	a
	O	MC1004	8B-KCG-253-010	SPR-C,ROTARY -BC2	a
	O	MC1005	8C-KC1-013-110	BTN,OV DISP/AF	a
	O	MC1006	8C-KTA-011-010	BTN,SEESAW NCD	a
	O	MC1007	8C-KC1-011-010	CABI,OV 2	a
	O	MC1008	8C-KCG-015-010	BTN, OV B	a
	O	MC1009	8C-KTA-202-010	LENS,L CLEAR	a
	O	MC1010	8C-KCG-014-010	BTN, OV R	a
	O	MC1011	8C-KCG-013-010	BTN, OV OUT	a
	O	MC1012	8C-KTF-004-010	BTN,OVAL POWER	a
	O	MC1013	8C-KTF-005-010	BTN,EJECT CKT	a
	O	MC1014	8B-KTF-204-010	SPR-C,EJ/FF/REW	a
	O	MC1015	8C-KTF-009-010	BTN,REW CKT	a
	O	MC1016	8C-KTF-008-010	BTN,FF CKT	a
	O	MC1017	8C-KTA-013-010	BTN,P.SET NCD	a
	O	MC1018	8C-KCG-216-010	LENS, R	a
	O	MC1019	8C-KTF-001-110	CABI,FRONT CKT	a
	O	MC1020	8C-KCG-023-010	BTN, DETACH	a
					CT-R402 YZSL
	O	MC1021	8Z-KC2-223-010	SPR-C,DETACH -C2	a
	X	MC1022	8C-KTF-204-010	HLDR,LCD R	a
	X	MC1023	8C-KTF-203-010	HLDR,LCD L	a
	O	MC1024	8C-KTF-610-010	LCD,CKT-10/15	a
	X	MC1025	8C-KTF-201-210	LENS,LCD	a
	X	MC1026	8C-KTF-202-010	CASE,LCD LENS	a
	O	MC1027	8A-KC7-611-010	F-CABLE,3P (AUX)	a
	X	MC1028	8C-KTF-603-010	PWB,FRONT	a
	O	MC1029	8C-KTF-002-010	CABI,REAR CKT	a
	O	MC1030	85-HRL-623-010	JACK,3.5 BLK ST BLK	a
	X	MC1031	8C-KTF-604-010	PWB,AUX	a
	X	MC1032	87-A92-096-010	CABLE TIE,TYH-24M	a
	X	MC1033	M8-AZK-490-070	CDS-363AG1-A	a
	O	MC1034	8Z-KC2-203-210	LEVER,DFP HOOK -C2	a
	O	MC1035	8Z-KC2-221-110	SPR-C,DETACH HOOK-C2	a
	O	MC1036	8C-KTF-011-110	CABI,BASE CKT	a
	O	MC1037	8Z-KT1-244-010	SPR-T,DOOR Z	a
	O	MC1038	8B-KT9-023-110	DOOR,CASSETTE	a
	O	MC1039	8Z-KC2-222-010	SPR-T,DETACH LOCK-C2	a
	O	MC1040	8C-KCG-205-010	LEVER,DFP LOCK	a
					CT-R402 YZSL
	X	MC1041	8C-KTF-209-010	CHAS,FRONT CKT	a
	O	MC1042	8C-KCG-202-010	CHAS, SIDE R C	a
	O	MC1043	8C-KCG-201-010	CHAS, SIDE L C	a
	X	MC1044	8C-KTF-207-010	HLDR,DECK CKT	a
	S	MC1045	8B-KC1-621-010	FUSE,15A 32V	a
	O	MC1046	8C-KCG-230-010	COVER, BASIC	a
	X	MC1047	8C-KTF-601-110	PWB,MAIN (CKT-15)	a
	O	MC1048	8Z-KC1-231-110	HLDR,HALF -C	a
	X	MC1049	8C-KCG-256-010	PANEL,HT-SINK Z	a
	O	MC1050	8A-KCG-211-010	HLDR,P-IC -AC16	a
	X	MC1051	8C-KCG-254-010	HLDR,ISO-WIRE	a
	O	MC1052	8C-KCG-036-010	CABI, TRIM 16	a
	O	MC1053	8C-KC1-012-010	BTN,OV T	a
	X	MC1054	8C-KCG-255-010	TUBE,ISO WIRE D12	a
	X	MC1055	8A-KCG-615-010	WIRE,400 P-MUTE	a
	O	MC1056	8A-KT1-646-110	CONN ASSY,8P ISO-WHITE-B	a
	O	MC1057	8A-KT1-645-110	CONN ASSY,8P ISO-BLACK-B	a
	O	MC1A	8Z-KC1-253-010	S-SCREW,PT 2*8 BH+ BLK	a
	O	MC1B	87-B10-399-010	UIT+2.6-5 BLK	a
	O	MC1C	87-B10-384-010	UIT+2.6-6	a
					CT-R402 YZSL
	O	MC1D	87-B10-386-010	UTT2+2.6-5 W/O SLOT	a
	O	MC1E	87-B10-397-010	UTT2+2.6-4 W/O SLOT	a
	O	MC1F	87-251-097-410	U+3-12	a
	O	MC1G	87-432-903-010	WTE,2.6	a

COLOR NAME TABLE -1/1

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange	GM	Metallic Green
YM	Metallic Yellow	DM	Metallic Orange	PT	Transparent Pink
LA	Aqua Blue	GL	Light Green	HT	Transparent Gray
HM	Metallic Gray	NH	Champagne Gold	M	Wood Pattern

TAPE MECHANISM EXPLODED VIEW -1/1 <CDS-363AG1-A>

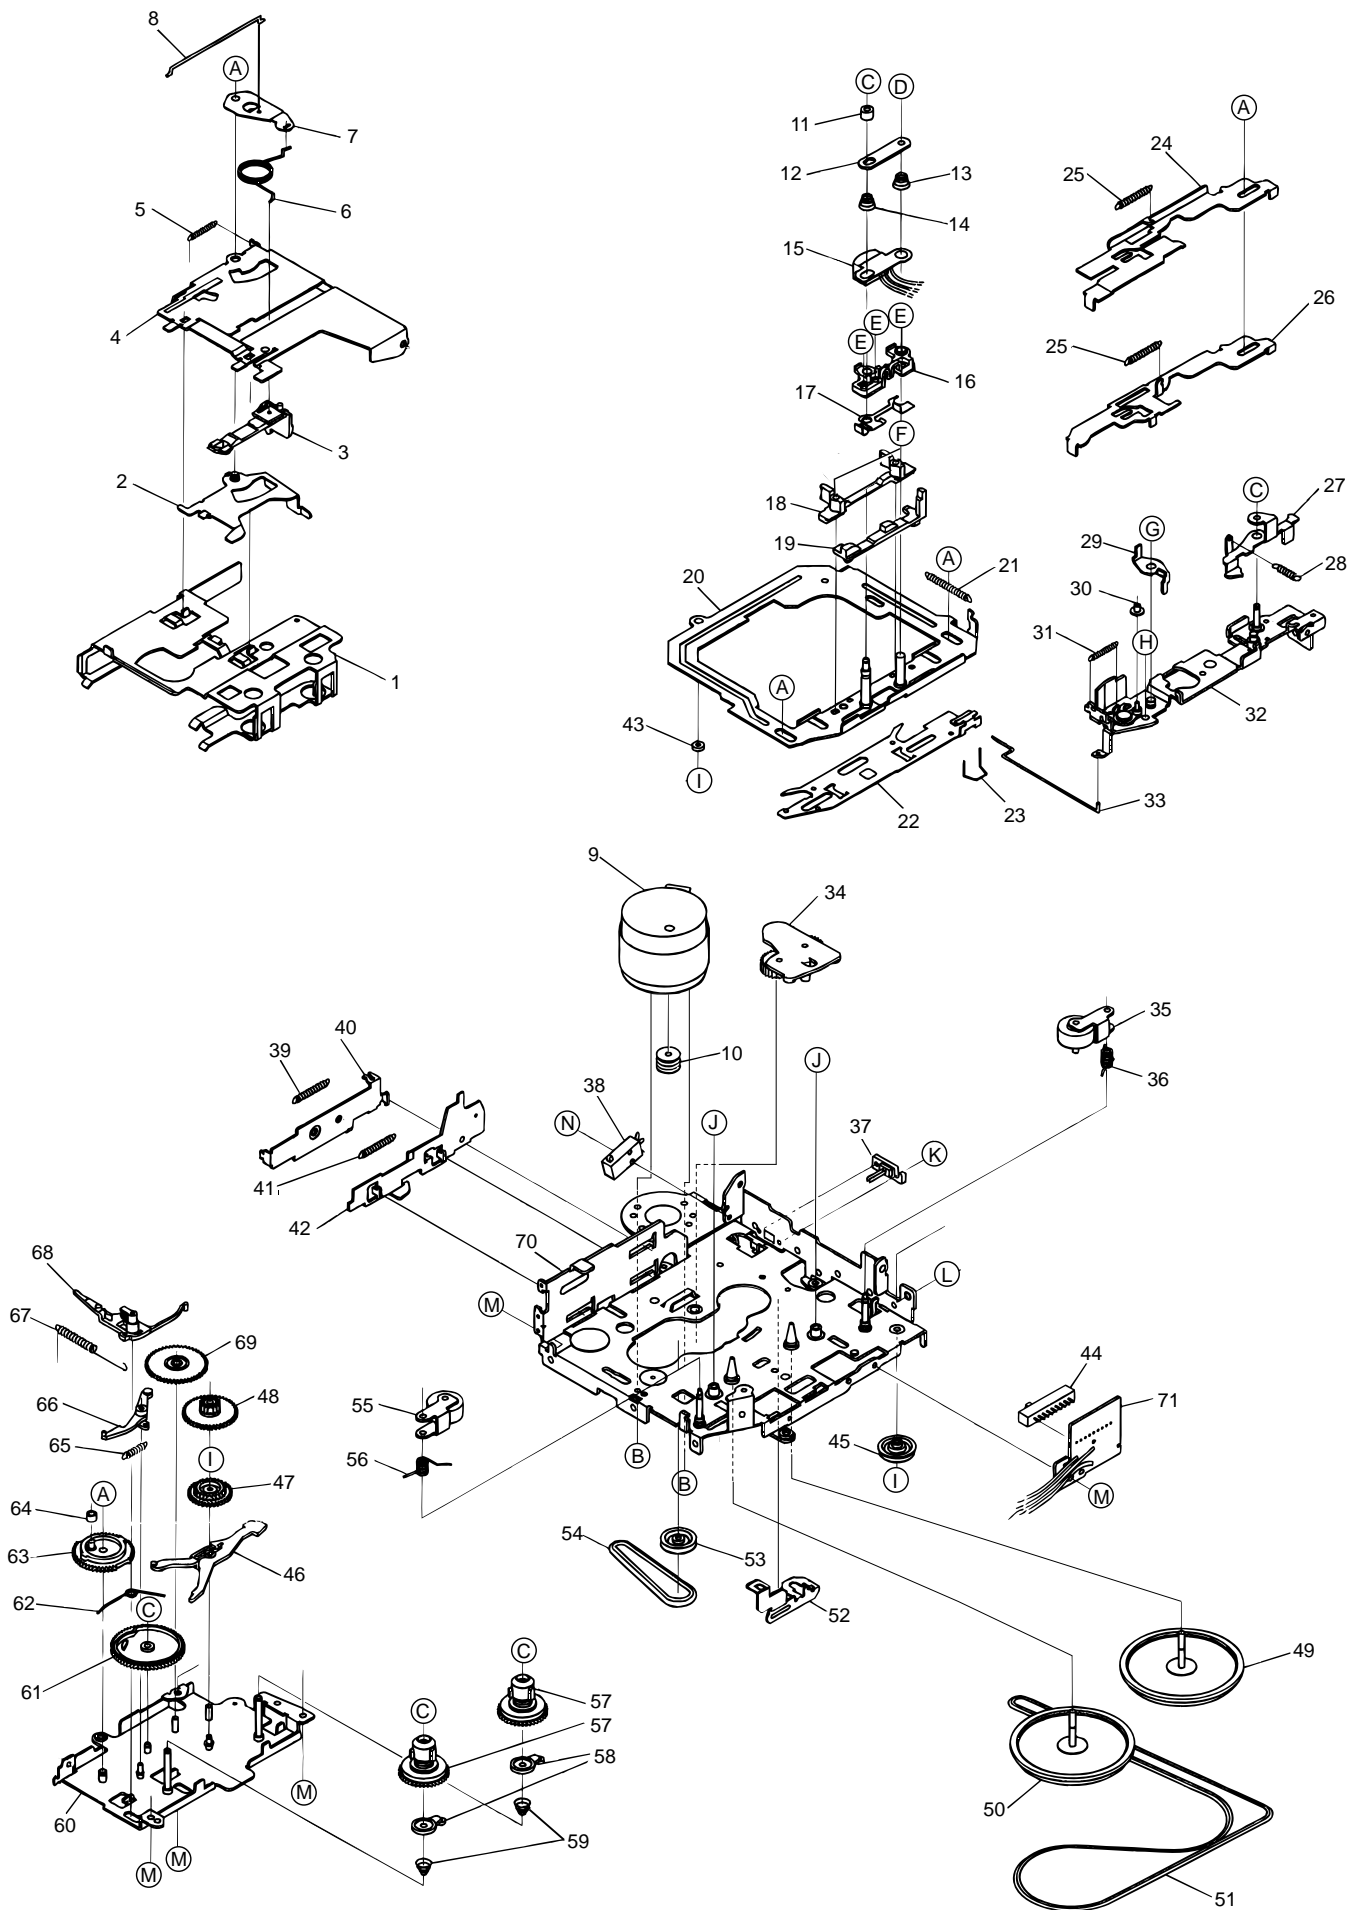

TAPE MECHANISM PARTS LIST -1/2 <CDS-363AG1-A>

! = SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
					A
					CDS-363AG1-A
	O	ST1001	S1-013-810-100	HOLDER CASS(X)	a
	O	ST1002	SX-003-610-190	EJECT CAM LOCK ASSY	a
	O	ST1003	S1-003-220-070	TAPE HOOKER	a
	O	ST1004	S1-013-810-020	HANGER CASS(X)	a
	O	ST1005	S1-003-640-070	EJECT CAM LOCK SPG	a
	O	ST1006	S1-003-640-230	CENTER PLATE SPG(B)	a
	O	ST1007	S1-003-610-180	PLATE CENTER	a
	O	ST1008	S1-036-350-070	RETURN LINK	a
	O	ST1009	S1-003-670-570	MOTOR	a
	O	ST1010	S1-036-330-420	MOTOR PULLEY (MBC)	a
	O	ST1011	S1-003-630-320	ROLLER FF(A)	a
	O	ST1012	S1-003-610-150	PLATE SPG SUPPORT	a
	O	ST1013	S1-003-640-100	ADJUSTER ARM SPG(A)	a
	O	ST1014	S1-003-640-110	ADJUSTER ARM SPG(B)	a
	O	ST1015	S1-036-370-040	HEAD	a
	O	ST1016	S1-013-820-053	ADJUSTER ARM BLUE	a
	O	ST1017	S1-013-810-060	ADJUSTER SHIM(X)	a
	O	ST1018	S1-003-820-180	GUIDE TAPE	a
	O	ST1019	S1-036-320-060	LINK ADJUSTER(B)	a
	O	ST1020	SX-036-310-020	HEAD PLATE ASSY	a
					A
					CDS-363AG1-A
	O	ST1021	S1-003-640-060	PLATE SPG HEAD	a
	O	ST1022	SX-036-310-040	FR CONVRT ARM ASSY(A)	a
	O	ST1023	S1-003-640-170	SW SELECT ARM SPG	a
	O	ST1024	S1-003-610-510	LEVER FF(AT)	a
	O	ST1025	S1-003-640-010	LEVER SPG FF/REW	a
	O	ST1026	S1-003-610-530	LEVER REW(AT)	a
	O	ST1027	S1-003-610-290	ARM LOCK(A)	a
	O	ST1028	S1-003-640-020	LEVER SPG LOCK	a
	O	ST1029	S1-003-610-230	LEVER CHANG(B)	a
	O	ST1030	S1-036-330-110	ROLLER PROGRAM	a
	O	ST1031	S1-003-640-080	ARM SPG PROGRAM	a
	O	ST1032	SX-036-360-020	LEVER BRACKET ASSY	a
	O	ST1033	S1-036-350-030	SELECTOR LINK(B)	a
	O	ST1034	SX-036-360-030	TU GEAR ARM ASSY	a
	O	ST1035	SX-036-360-050	PINCH ARM ASSY(F)	a
	O	ST1036	S1-036-340-030	PINCH ARM SPG(F)	a
	O	ST1037	S1-036-370-010	SW,MUTE	a
	O	ST1038	S1-036-370-050	SW POWER	a
	O	ST1039	S1-036-340-050	LEVER SPG EJECT	a
	O	ST1040	S1-003-610-070	LEVER EJECT	a
					A
					CDS-363AG1-A
	O	ST1041	S1-036-340-060	CAM SPG EJECT	a
	O	ST1042	S1-036-310-030	CAM EJECT	a
	O	ST1043	S1-036-330-070	ROLLER HP(A)	a
	O	ST1044	S1-036-370-020	SW,SLIDE	a
	O	ST1045	S1-005-820-215	IDLE PULLEY(A)	a
	O	ST1046	S1-003-620-090	ARM SENSOR	a
	O	ST1047	S1-003-620-010	GEAR IDLE	a
	O	ST1048	S1-003-620-040	GEAR REDUCTION(A)	a
	O	ST1049	S1-036-360-100	FLYWHEEL ASSY(F) CPL	a
	O	ST1050	S1-036-360-110	FLYWHEEL ASSY(R) CPL	a
	O	ST1051	S1-003-650-040	BELT MAIN	a
	O	ST1052	S1-003-610-260	ARM FR(B)	a
	O	ST1053	S1-036-320-030	GEAR PULLEY	a
	O	ST1054	S1-036-350-010	BELT SUB	a
	O	ST1055	SX-036-360-040	PINCH ARM ASSY(R)	a
	O	ST1056	S1-036-340-040	PINCH ARM SPG(R)	a
	O	ST1057	SX-036-320-050	REEL SPINDLE ASSY	a
	O	ST1058	SX-036-360-060	DETECTOR CAM ASSY(V)	a
	O	ST1059	S1-013-840-010	BACK TENSION SPG	a
	O	ST1060	SX-036-360-010	REEL BASE ASSY	a
					A
					CDS-363AG1-A
	O	ST1061	S1-003-620-140	GEAR DETECTR	a
	O	ST1062	S1-003-640-150	DASH SPG	a
	O	ST1063	S1-003-620-100	GEAR SELECTOR	a
	O	ST1064	S1-003-630-180	COLLER(SELECTOR GEAR)	a
	O	ST1065	S1-003-640-030	GEAR LOCK ARM SPG	a
	O	ST1066	S1-003-820-140	GEAR LOCK ARM	a
	O	ST1067	S1-003-840-140	RATCHET SPG	a
	O	ST1068	S1-003-620-070	RATCHET	a
	O	ST1069	S1-003-620-030	GEAR REDUCTION(B)	a
	X	ST1070	SX-036-310-010	MAIN CHASSIS ASSY	a
	X	ST1071	S1-036-370-030	PWB SW SLIDE	a
	O	ST1A	S2-171-200-501	E-RING 2	a
	O	ST1B	S2-103-200-25C	SCREW,M2-2.5	a
	O	ST1C	S1-003-650-240	PSW(REEL)B 1.5-3.2-0.25	a
	O	ST1D	S2-101-200-40C	SCREW,M2-4	a
	O	ST1E	S1-013-850-020	SCREW,M2-5	a
	O	ST1F	S2-103-200-70C	SCREW,M2-7	a
	O	ST1G	S2-171-250-601	E-RING 2.5	a
	O	ST1H	S2-133-200-40C	SCREW,S-TYPE M2-4	a
	O	ST1I	S2-181-200-30D	PSW-S 1.2-3.0-0.25	a

! = SAFETY PARTS

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

A
CDS-363AG1-A

! = SAFETY PARTS
C = Components marked

C = Components marked

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL
				CT-R402
				YZSL
	X	8C-KCG-225-010	SH,ADH 3-10	a
	X	87-B40-087-010	BAG,PV 0.04-250-350 PL	a
	X	8C-KTA-857-010	CTN,OUTER 402 YZSL	a
	X	8C-KTA-856-010	CTN,PRINTED 402 YZSL	a
	X	8Z-KC1-871-010	CUSHION,DFP-GUARD	a
	X	8C-KCA-853-110	CUSHION,LEFT SML	a
	X	8C-KCA-854-110	CUSHION,RIGHT SML	a
	X	8C-KCA-857-010	PAD,A SML	a
	X	87-B40-454-010	BAG,PP 0.04-230-350 PL	a
	X	87-056-168-010	SH,CAUTION INF-WARR(EC)	a
	X	8C-KTF-927-010	SH,DEMO (14L) SML 432	a
	X	8C-KCG-926-010	SH,SCREW DFP (14L) SML	a
	X	87-B40-178-010	BAG,PV 0.04-100-250	a
	X	87-B40-179-010	BAG,PV 0.04-50-100	a
	X	87-B40-242-010	BAG,PV 0.04-70-100	a
	X	8B-KTF-202-010	CUSHION,CASSETTE	a
	X	8C-KCG-233-010	CUSHION,DFP-CASE	a
	X	87-B40-281-010	LBL,BAR-CODE A 35X8	a
	X	87-B40-154-010	LBL,BAR-CODE CU	a
	X	8C-KTA-007-010	LBL,SPEC YZ R402 T	a
				CT-R402
				YZSL
	X	8C-KTF-206-010	SH,ADH WINDOW	a
	X	8C-KTA-201-010	SH,LCD R402	a
	X	8Z-KC1-234-210	SH,PWB	a

OTHER PARTS LIST -2/2 <CDS-363AG1-A>

! =  SAFETY PARTS

C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

[illegible]



アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110-8710, JAPAN TEL:03 (3827) 3111
